

Aviation GmbH

AIRPLANE FLIGHT MANUAL AQUILA AT01



LBA Approved in Normal Category based on JAR-VLA.

This Airplane Flight Manual must be carried on board the aircraft at all times and be kept within the reach of the pilot during all flight operations. The amendment history and revision status of each section of the Airplane Flight Manual are provided in the list of effective pages and in the list of revisions.

This aircraft must be operated in compliance with the procedures and operating limits specified herein.

SERIAL NO.:

AQUILA AT01-

REGIST. NO.:

Revision A.01 was approved by the Luftfahrt-Bundesamt (LBA) on 30/08/2002 within the scope of the type-certification. All revisions of section 2, 3, 4 and 5 beyond the scope of documentary changes are subject to EASA-approval.

Doc. No.	FM-AT01-1010-100E
First Issued:	05/06/2002
Cover Page Issue No.:	B.04



 
INTRODUCTION

With the AQUILA AT01 you have acquired a very efficient training and utility aircraft, which can be operated very easily and which exhibits excellent handling qualities.

Reliable operation, handling and maintenance guarantee trouble-free flights and continued airworthiness.

To ensure this, we recommend that you read this Airplane Flight Manual thoroughly and adhere to the operating instructions and recommendations given herein.

Furthermore, we recommend attending a type training course held by AQUILA trained personnel to obtain a "feeling" for the optimal operation of the aircraft within a shorter period of time.



All limitations, procedures and performance data contained in this handbook are EASA-/ LBA-approved and mandatory. Failing to pay attention to the procedures and limits of the handbook can lead to a loss of liability by the manufacturer.

THE HANDBOOK

The Airplane Flight Manual has been prepared using the recommendations of JAR-VLA Appendix H (issue 26/4/90) "Specimen Flight Manual for a Very Light Aeroplane". The handbook is presented in loose-leaf form to ease the substitution of revisions and is sized in A5-format for convenient storage in the airplane. Tab dividers throughout the handbook allow quick reference to each section. Tables of Contents are located at the beginning of each section to aid the location of specific data within that section.

All rights reserved.

Reproduction or disclosure to third parties of this document or any part thereof is not permitted, except with the prior and express written permission of the AQUILA Aviation GmbH.



Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 1

TABLE OF CONTENTS

	SECTION
GENERAL	1
OPERATING LIMITATIONS (approved section)	2
EMERGENCY PROCEDURES (approved section)	3
NORMAL PROCEDURES (approved section)	4
PERFORMANCE (partly approved section)	5
WEIGHT AND BALANCE	6
DESCRIPTION OF THE AIRCRAFT AND ITS SYSTEMS	7
HANDLING, SERVICE AND MAINTENANCE	8
SUPPLEMENTS	9

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 2



1

LIST OF EFFECTIVE PAGES

Section	approved	lssue No.	Page	Date
0		B.04	0-1 to 0-8	13/04/2015
1		B.01	1-1 to 1-12	12/07/2012
2	х	B.01	2-1 to 2-20	12/07/2012
3	х	B.01	3-1 to 3-16	12/07/2012
4	х	B.04	4-1 to 4-20	13/04/2015
5	(X)*	B.01	5-1 to 5-23	12/07/2012
6		B.01	6-1 to 6-14	12/07/2012
7		B.04	7-1 to 7-32	13/04/2015
8		B.01	8-1 to 8-8	12/07/2012
9		B.04	9-1 to 9-3	13/04/2015

- partly approved •

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 3



LIST OF REVISIONS

All implementations of revisions to this manual, except individual weight and balance data, should be entered into the record of revisions on the next page. Revisions must either be approved by the EASA or, in the case of documentary changes in accordance with Part 21A.263(c)(4), by the Design Organization of AQUILA Aviation GmbH.

Additions and revisions to the text in an existing section will be identified by a vertical black line adjacent to the applicable revised area. A new issue code appears in the footer of the pages of the revised section.

The operation of the AQUILA AT01 is only permitted with an Airplane Flight Manual in the current effective status on board the aircraft.

Please refer to our web page www.aquila-aviation.de whenever the revision status of your Airplane Flight Manual is in question.

lssue No.	Description of Revisions	Revised Section(s)	Approval by AQUILA*/EASA Date/Signature
A.01	First Issue	Alle	30/08/2002
A.02	Installation of Garmin Avionic	0,2,9	13/05/2003
A.03	Editorial corrections	0,4,5,7	16/05/2003
A.04	Supplements for Bendix King equipment	0,9	09/07/2003
A.05	External Power, Supplement for Pointer ELT	0,7,9	09/10/2003
A.06	Winterization Kit	0,2,9	10/03/2004
A.07	KANNAD 406 AF, ELT	0,9	23/06/2005
A.08	Supplements for Garmin Avionic	0,1,4,9	30/06/2005
A.09	Supplement for Bendix King KT 73	0,9	08/07/2005
A.10	Supplement for ARTEX ME406, ELT	0,9	07/03/2008
A.11	Introduction of new Emergency Proc. And various AFM-Supplements	0,3,9	28/08/2008 (EASA)

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 4



AIRPLANE FLIGHT MANUAL AQUILA AT01

Section 0

lssue No.	Description of Revisions	Revised Section(s)	Approval by AQUILA*/EASA Date/Signature
A.12	Documentary changes	All	28.11.2008
A.13	Supplement Garrecht Mode-S Transponder	0,9	19/03/2009
A.14	Supplement for Day/Night-VFR- Operation	0,7,9	03/09/09 (25.03.2010 EASA)
A.15	Supplement ASPEN EFD 1000 PFD/MFD	0,9	07/12/2009
A.16	Supplement GARMIN G500-System	0,9	22.07.2010
A.17	Changes in supplement for GARMIN G500-sytem	0,9	07.10.2010 (15.11.2010 EASA)
A.18	Normal procedure – Actions introduced by SB-AT01-020	0,4	29.11.2010 (14.01.2011 EASA)
A.19	Documentary changes	0,9	14/09/2011
A.20	Supplement ASPEN PFD and GARMIN G500 for Day/Night-VFR-Operation	0,9	21/03/2012 (20.04.2012 EASA)
A.21	Supplement GARMIN GTN650, GMA 350	0, 9	21/05/2012
B.01	Editorial corrections	All	12/07/2012
B.02	Supplement Trig TT22	0, 9	21/11/2012
B.03	Documentary changes, revised supplement winter kit, supplements Garrecht TRX 1500 and 2000	0, 9	04/03/2014
B.04	Documentary changes	0, 4, 7, 9	13/04/2015

Revision B.04 of AFM ref. FM-AT01-1010-100E is approved under the authority of DOA ref. EASA.21J.025.



Date, Signature Office of Airworthiness

Dokument No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 5



RECORD OF REVISIONS

When a new revision to the Airplane Flight Manual is issued, the corresponding sections have to be removed and replaced by the pages of the revised sections.

Only entire sections will be changed and have to be replaced. Each time, when the incorporation of a revision is accomplished, an endorsement has to be made in the record of revisions shown below.

Issue No.	Revised Sections	Date of Issue	Date of insertion:	Inserted by:
A.01	All	05/06/2002		
A.02	0,2,9	20/11/2002		
A.03	0,4,5,7	15/04/2003		
A.04	0,9	19/05/2003		
A.05	0,7,9	30/09/2003		
A.06	0,2,9	10/02/2004		
A.07	0,9	30/07/2004		
A.08	0,1,4,9	30/06/2005		
A.09	0,9	05/07/2005		
A.10	0,9	05/03/2006		
A.11	0,3,9	30/11/2007		
A.12	All	17/09/2008		
A.13	0,9	19/03/2009		
A.14	0,7,9	03/09/2009		
A.15	0,9	07/12/2009		
A.16	0,9	22/7/2010		
A.17	0,9	07/10/2010		
A.18	0,4	29/11/2010		
A.19	0,9	14/09/2011		
A.20	0,9	21/03/2012		
A.21	0,9	21/05/2012		
B.01	All	12/07/2012		
B.02	0, 9	21/11/2012		
B.03	0, 9	04/03/2014		
B.04	0, 4, 7, 9	13/04/2015		

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 6



Purchase of Technical Publications

To guarantee safe operation and correct maintenance of the aircraft AQUILA AT01, all manuals and technical publications must be kept in the current effective status.

All manuals and technical publications relating to the aircraft AQUILA AT01 are available from the companies listed below:

(a) AQUILA AT01 related Manuals and Publications

AQUILA Aviation GmbH OT Schönhagen Flugplatz D-14959 Trebbin

Tel: +49 (0)33731 707-0 Fax: +49 (0)33731 707-11 E-Mail: kontakt@aquila-aviation.de Internet: http://www.aquila-aviation.de http://www.facebook.com/aquilaa210

(b) Engine ROTAX 912 S related Manuals and Publications

 $ROTAX_{\ensuremath{\mathbb{R}}}$ authorized distributor for $ROTAX_{\ensuremath{\mathbb{R}}}$ Aircraft Engines of the applicable distribution area.

For contact details of the local authorized distributor for ROTAX Aircraft Engines, please refer to chapter 13 of the ROTAX $_{\odot}$ Operator's Manual for 912 S Engines.

(c) Propeller MTV-21 related Manuals and Publications

mt-Propeller Entwicklung GmbH Flugplatz Straubing- Wallmühle D-94348 ATTING

Tel: +49 (0)9429 9409-0 Fax: +49 (0)9429 8432 Internet: www.mt-propeller.com E-mail: sales@mt-propeller.com

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 7

	iation	AIRPLANE FLIGHT MANUAL AQUILA AT01	Section 0
--	--------	---------------------------------------	-----------

[Intentionally left blank]

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	0 - 8



SECTION 1

GENERAL

		Page
1.1	INTRODUCTION	1-2
1.2	AIRCRAFT TYPE CERTIFICATION	1-2
1.3	WARNING, CAUTIONS AND NOTES	1-3
1.4	PRINCIPAL AIRCRAFT DIMENSIONS	1-4
1.4.1	Overall Dimensions	1-4
1.4.2	Wings	1-4
1.4.3	Horizontal Stabilizer / Elevator	1-4
1.4.4	Fuselage and Vertical Stabilizer / Rudder	1-4
1.4.5	Landing Gear	1-4
1.5	AQUILA AT01 – THREE VIEW DRAWING	1-5
1.6	ENGINE	1-6
1.7	PROPELLER	1-6
1.8	FUEL	1-6
1.9	ENGINE OIL AND COOLANT	1-7
1.9.1	Engine Oil	1-7
1.9.2	Engine Coolant	1-8
1.10	WEIGHTS	1-8
1.11	TERMINOLOGY AND ABBREVIATIONS	1-9
1.12	CONVERSION FACTORS	1-11

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 1



1.1 INTRODUCTION

This Airplane Flight Manual contains all the information that the pilot and instructor need for safe aircraft operation and to get the optimum utility from the AQUILA AT01.

It includes all data required in accordance with JAR-VLA and additional information provided by the manufacturer and type certificate holder for maximum utilization as an operating guide for the pilot.

This Manual consists of eight sections which cover all operational aspects of a standard equipped aircraft. Optional equipment which has been installed on request of the customer (COM, NAV, GPS and others) is considered in Section 9 "Supplements" of this Manual.

Information regarding approved equipment that may be installed in the AQUILA AT01 is provided in Section 6, paragraph 6.5 and in the approved equipment overview list in the Maintenance Manual, respectively.

1.2 Aircraft Type Certification

The aircraft model AQUILA AT01 is type-certificated in accordance with the certification specifications of the *Joint Aviation Requirements for Very Light Aeroplanes (JAR-VLA,* including the revision VLA/92/1) by the Luftfahrt-Bundesamt, the National Aviation Authority of Germany.

The Type Certificate under the Type Certificate Data Sheet No. 1106 has been issued on 21/09/2001.

The aircraft is certificated in the category: NORMAL

Noise Certificate according to: Noise Requirements for Aircraft (LSL), Chapter X

Additional Noise Requirements: Airfield Noise Requirements, Issue 05/01/1999

Approved Kinds of Operation:

DAY-VFR NIGHT-VFR (optional)

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 2

1.3 WARNING, CAUTIONS AND NOTES

Throughout the text, special text boxes termed WARNING, CAUTION and NOTE are used to emphasize and address general remarks and special characteristics pertaining to aircraft handling as well as operation. These terms are defined as follows:

WARNING

Procedures, practices, etc. which may result in personal injury or loss of life if not thoroughly adhered to. The issues addressed under these text boxes directly affect the airworthiness and the safe operation of the airplane.

CAUTION

Procedures, practices, etc. which may result in damage to or destruction of equipment if not strictly adhered to. The issues addressed under these text boxes have an indirect or minor impact on the airworthiness and the safe operation of the airplane.

NOTE

Calls attention to additional procedures or information which are not directly associated with flight safety but nevertheless important or unusual to standard practices.

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 3

AQUILA Aviation

1.4 AIRCRAFT PRINCIPAL DIMENSIONS

1.4.1 Overall Dimensions

Wing Span:	10.3	m
Length:	7.35	m
Height:	2.4	m

1.4.2 Wings

Airfoil:	HQ-XX mod.	
Area:	10.5	m²
Aspect Ratio:	10.1	
Mean Aerodynamic		
Chord (MAC):	1.07	m

1.4.3 Horizontal Stabilizer / Elevator

Area:	2.0	m²
Span:	3.0	m

1.4.4 Fuselage and Vertical Stabilizer / Rudder

Max. Width	1.20	m
Length	7.35	m


1.4.5 Landing Gear

Wheel Track:	1.938	m
Wheel Base:	1.685	m
Tire Sizes		
Nose Gear:	5.00-5	
Main Gear:	5.00-5	
Tire Pressure		
Nose Gear:	2.0	bar
Main Gear:	2.5	bar

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 4



1.5 AQUILA AT01 – Three View Drawing

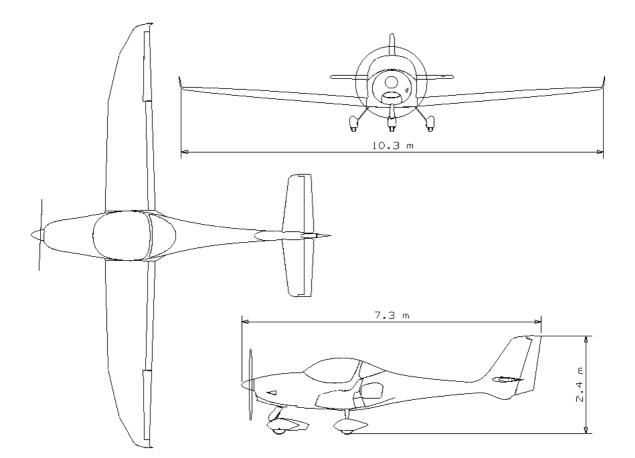

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 5



1.6 ENGINE

The ROTAX $_{\ensuremath{\mathbb{S}}}$ 912 S3 is a 4-cylinder, 4-stroke engine with ram air-cooled and horizontally opposed cylinders as well as liquid-cooled cylinder heads.

The propeller is driven via an internal reduction gearbox with an integrated overload clutch and a hydraulic constant speed propeller governor.

Reduction Ratio of internal gearbox:	2.43 : 1	
Displacement:	1352	cm³
Take-off performance:	69.0	kW
at a propeller shaft speed of	2263	1/min

1.7 PROPELLER

Two-blade, constant speed propeller manufactured by mt-Propeller Entwicklung GmbH.

Туре:	MTV-21-A/17	75-05
Hydraulically controlled variable		
pitch (constant speed) propeller		
Max. propeller diameter:	175	cm

1.8 FUEL

The following fuel grades are approved for use (min. RON 95):

EN228 Premium
EN228 Premium plus
AVGAS 100LL

		Left Fuel Tank Right Fue	
Fuel capacity (total):		60	60 litres
Usable fuel (total)	:	54.8	54.8 litres
Unusable fuel:		5.2	5.2 litres

Due to the higher lead content in AVGAS, wear of the valve seats, deposits in the combustion chamber and lead sediments in the lubrication system will increase when using this type of fuel. Therefore, use AVGAS only if you encounter problems with vapor lock or if the other fuel types are not available (refer also to the Operators Manual for ROTAX® Engine Type 912 Series, latest revision).

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 6



1.9 ENGINE OIL AND COOLANT


1.9.1 Engine Oil

Use only oil with API classification "SG" or higher.

Heavy duty 4-stroke motor cycle oils meet normally all requirements.

For more information regarding engine oil selection, refer to the Operator's Manual for all versions of 912 series engines, section 10.2.3, and to $ROTAX_{\odot}$ Service Instruction SI-912-016, latest revision.

The following chart shows the recommended oil viscosity as a function of climatic conditions. The use of multi-grade oils is recommended.

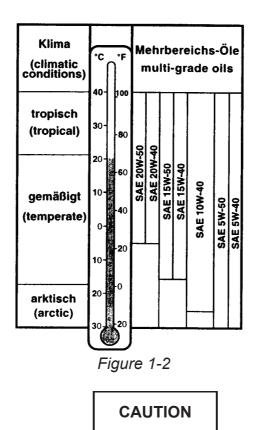

Do not use aviation grade oil !

When operating the engine with AVGAS do <u>not</u> use full synthetic oil types! When operating the engine with AVGAS, more frequent oil changes will be required! (refer also to ROTAX_® Service Instruction SI-912-016, latest rev., for more information)

Max. oil capacity :	3.0	Litres
Quantity between max/min	0.45	Litres
Max. oil consumption:	0.06	Litres/h

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 7



1.9.2 Engine Coolant

Only the following water-free coolant concentrate based on propylene glycol is approved for use in the AQUILA AT01.

	Mixture Ratio %		
Designation	concentrate water		
EVANS NPG+®	100	0	

When correctly applied (100% coolant concentration), there is sufficient protection against vapor formation and the freezing or thickening of the coolant within the operating limits.

WARNING

The coolant concentrate EVANS NPG+® must not be mixed with conventional glycol/water coolant or with additives. Disregard of this warning can lead to damage to the cooling system and, as a result, to motor damage, since the properties of the coolant no longer exist (refer also to ROTAX_® SB-912-043, latest revision, as well as ROTAX Service Instruction SI-912-016, latest revision, for more information).

CAUTION

Inferior-quality and contaminated coolant may lead to deposits in the cooling system which may result in insufficient engine cooling.

Coolant quantity total:	minimum:	2.4	liters
	maximum:	2.5	liters
Coolant quantity in the overflow Bottle:	minimum:	0.1	liters
	maximum:	0.2	liters

1.10 WEIGHTS

Max. take-off weight (MTOW):	750	kg
Max. landing weight (MLW):	750	kg
Empty weight:	Refer	to section 6
Max. weight in baggage compartment:	40	kg
(All baggage must be adequately strap	pped and secu	red)
Max. ing loading:	71.4	kg/m²
Min. wing loading:	circa 52.6	kg/m²

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 8



1.11 TERMINOLOGY AND ABBREVIATIONS

1.11.1 Airspeeds

- *IAS:* (Indicated Airspeed) the speed shown on the airspeed indicator.
- KIAS: IAS expressed in knots
- *CAS:* (Calibrated Airspeed) the indicated airspeed, corrected for position and instrument error. CAS is equal to true airspeed in standard atmosphere conditions at sea level.
- *KCAS:* CAS expressed in knots
- *TAS:* (True Airspeed)- the airspeed relative to undisturbed air, which is the CAS corrected for altitude, temperature and compressibility.
- GS: (Ground speed)-airspeed relative to the ground.
- *V_A:* Maneuvering speed
- *V_S*: Stalling speed without engine power.
- V_{S0} : Stalling speed without engine power in the landing configuration.
- *V_X:* Best angle-of-climb Speed
- V_Y: Best rate-of-climb Speed
- *V_{FE}:* Maximum flap extended speed
- *V_{NE}:* Never exceed speed the speed limit that must not be exceeded at any time.
- V_{NO} : Maximum structural cruising speed the speed that should not be exceeded except in smooth air and then only with caution.

1.11.2 Weight and Balance

Reference DatumAn imaginary vertical plane from which all horizontal
distances are measured for balance purposes.

Reference line fixed horizontal reference line

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 9

AQUILA Aviation		IE FLIGHT MANU QUILA AT01		ction 1 NERAL		
Lever arm:		The horizontal distance from the reference datum to the centre of gravity (C.G.) of an item.				
Moment:	The prod arm.	uct of the weight o	f an item multiplie	d by its lever		
Empty weight:	Weight o liquids ar	f the aircraft includ nd full oil.	ing unusable fuel,	full operating		
Max. take-off weight:	Maximun the take-	n permissible weig off run.	ht approved for th	e conduction of		
Useful load:	Differenc	e between take-of	f weight and basic	empty weight.		
Usable fuel :	Fuel ava	Fuel available for flight planning.				
Unusable fuel:	Fuel remaining in the fuel tanks that cannot be safely used ir flight.					
Centre of gravity (C.G.):	The point at which an aircraft would be in the balanced condition if seated/suspended on that point (centre of mass).					
MAC:	Mean ae	rodynamic chord				
1.11.3 Meteorolo	gical Term	inology				
OAT:	Outside a	air temperature				
VFR, day	day: (S	R) Sunrise-30 min	to (SS) Sunset+3	0 min		
1.11.4 Engine an	d Performa	ance				
Take-off power:	Maximun	Maximum power permissible for take-off.				
Max. continuous power:	Maximun	n power permitted	for continuous ope	eration.		
1.11.5 Miscellane	eous					
Serial No. (S/N):	Serial nu	mber of the aircraf	t			
Part No. (P/N):	Part num	ber				
GFRP:	Glassfibe	er reinforced plastic	2			
CFRP:	Carbonfi	ber reinforced plas	tic			
ACL:	Anti-collis	sion light				
Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:		

A.12 (17/09/2008)

12/07/2012

1 - 10

FM-AT01-1010-100E

B.01

1.12 CONVERSION FACTORS

1.12.1	Length								
	1 ft 1 in	= =	0.304 25.4		m mm				
1.12.2	Airspeed								
	1 kt 1 mph	= =	1.852 1.609		km/h km/h				
1.12.3	Pressure								
	1 hPa 1 in Hg 1 psi		= = =	100 33.86 68.97		N/m² hPa mbar		=	1 mbar
1.12.4	Mass ("Wei	ght")							
	1 lbs			=	0.454		kg		
1.12.5	Volume								
	1 US Gallon 1 Imperial G			= =	3.78 4.546	i	Litre Litre		
1.12.6	Temperatu	re							
	(t)°C (Celsiu (t)°F (Fahrei			= =		t)°F - 3)°C + 3			

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 11



1.12.7 RESERVED

[Intentionally left blank]

Dokument No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	1 - 12



SECTION 2

LIMITATIONS

2.1INTRODUCTION2-22.2AIRSPEED LIMITATIONS2-32.3AIRSPEED INDICATOR MARKINGS2-32.4POWER PLANT LIMITATIONS2-32.5POWER PLANT INSTRUMENT MARKINGS2-52.6OTHER INSTRUMENT MARKINGS2-62.7MASS LIMITS (Weight Limits)2-62.8CENTER OF GRAVITY LIMITS2-62.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-102.17RESERVED2-20	-		Page
2.3AIRSPEED INDICATOR MARKINGS2.32.4POWER PLANT LIMITATIONS2.32.5POWER PLANT INSTRUMENT MARKINGS2.52.6OTHER INSTRUMENT MARKINGS2.62.7MASS LIMITS (Weight Limits)2.62.8CENTER OF GRAVITY LIMITS2.62.9MANEUVER LIMITS2.72.10FLIGHT LOAD FACTORS2.72.11CREW2.82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2.82.13FUEL LIMITATIONS2.92.14DEMONSTRATED CROSSWIND COMPONENT2.92.15TEMPERATURE LIMITATIONS2.92.16PLACARDS2.10	2.1	INTRODUCTION	2-2
2.4POWER PLANT LIMITATIONS2.32.5POWER PLANT INSTRUMENT MARKINGS2.52.6OTHER INSTRUMENT MARKINGS2.62.7MASS LIMITS (Weight Limits)2.62.8CENTER OF GRAVITY LIMITS2.62.9MANEUVER LIMITS2.72.10FLIGHT LOAD FACTORS2.72.11CREW2.82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2.82.13FUEL LIMITATIONS2.92.14DEMONSTRATED CROSSWIND COMPONENT2.92.15TEMPERATURE LIMITATIONS2.92.16PLACARDS2.10	2.2	AIRSPEED LIMITATIONS	2-2
2.5POWER PLANT INSTRUMENT MARKINGS2-52.6OTHER INSTRUMENT MARKINGS2-62.7MASS LIMITS (Weight Limits)2-62.8CENTER OF GRAVITY LIMITS2-62.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.3	AIRSPEED INDICATOR MARKINGS	2-3
2.6OTHER INSTRUMENT MARKINGS2-62.7MASS LIMITS (Weight Limits)2-62.8CENTER OF GRAVITY LIMITS2-62.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.4	POWER PLANT LIMITATIONS	2-3
2.7MASS LIMITS (Weight Limits)2-62.8CENTER OF GRAVITY LIMITS2-62.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.5	POWER PLANT INSTRUMENT MARKINGS	2-5
2.8CENTER OF GRAVITY LIMITS2-62.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.6	OTHER INSTRUMENT MARKINGS	2-6
2.9MANEUVER LIMITS2-72.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.7	MASS LIMITS (Weight Limits)	2-6
2.10FLIGHT LOAD FACTORS2-72.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.8	CENTER OF GRAVITY LIMITS	2-6
2.11CREW2-82.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.9	MANEUVER LIMITS	2-7
2.12KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT2-82.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.10	FLIGHT LOAD FACTORS	2-7
2.13FUEL LIMITATIONS2-92.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.11	CREW	2-8
2.14DEMONSTRATED CROSSWIND COMPONENT2-92.15TEMPERATURE LIMITATIONS2-92.16PLACARDS2-10	2.12	KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT	2-8
2.15 TEMPERATURE LIMITATIONS 2-9 2.16 PLACARDS 2-10	2.13	FUEL LIMITATIONS	2-9
2.16 PLACARDS 2-10	2.14	DEMONSTRATED CROSSWIND COMPONENT	2-9
	2.15	TEMPERATURE LIMITATIONS	2-9
2.17 RESERVED 2-20	2.16	PLACARDS	2-10
	2.17	RESERVED	2-20

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 1



2.1 INTRODUCTION

This section includes all operating limitations, instrument markings and basic placards necessary for the safe operation of the aircraft, its engine, standard systems and standard equipment.

WARNING

The aircraft must be operated in compliance with the operating limitations.

2.2 AIRSPEED LIMITATIONS

The airspeeds given below are expressed in knots Indicated Airspeeds (IAS):

Indicated Airspeed (IAS)	[kts]	Remarks
V _A Maneuvring speed	112	Do not make full or abrupt control movements above this speed. This may result in overloading the aircraft structure.
V _{FE} Maximum flap extended speed	90	Do not exceed this speed with flaps extended.
V _{NO} Maximum structural cruising speed	130	Do not exceed this speed except in smooth air, and then only with caution.
V _{NE} Never exceed speed	165	Do not exceed this speed in any operational condition.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 2

2.3 AIRSPEED INDICATOR MARKINGS

The airspeeds given below are expressed in knots Indicated Airspeeds (IAS):

Marking (IAS)	[kts]	Remarks
White arc	44-90	Full flap operating range
Green arc	52-130	Normal operating range
Yellow arc	130-165	Operations in this region must be conducted with caution and are allowed only in smooth
Red line	165	Maximum speed for all operations.

2.4 POWER PLANT LIMITATIONS

2.4.1 Engine

- a) Manufacturer: BRP-ROTAX GmbH & Co KG, Gunskirchen, Austria
- b) Model: 912 S3



The engine is equipped with a hydraulic propeller governor and drives the propeller via a reduction gearbox. The gearbox reduction ratio is 2.43 : 1. The tachometer indicates the propeller speed. As a result, all RPM readings in this manual are expressed as propeller speeds, unlike the data in the Engine Operator's Manual.

c) Power Plant Limitations

Maximum take-off power:	69.0	kW
Maximum take-off propeller speed:	2260	rpm
Maximum continuous power:	69.0	kW
Maximum continuous propeller speed:	2260	rpm

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 3

Ac	UILA Aviation	AIRPLANE FLIGH AQUILA A	-		Section 2 LIMITATIONS
d)	Oil Pressure				
d)	Minimum: Normal:		0.8 2.0 – 5.0	bar bar	below 1440 rpm above 1440 rpm
	Maximum during of (for a short period		7.0	bar	
e)	Fuel Pressure				
	Minimum:		red warning	g light	
f)	Oil Temperature				
	Maximum: Minimum:		130 50	°C ℃	
	Optimal operating	temperature:	90 – 110	°C	
g)	Cylinder head tem	perature			
	Maximum:		135	°C	
h)	Outside Air Tempe	erature (OAT) at Star	t of Engine		
,	Minimum:		-25	°C	
	Engine must be pr	eheated at OAT belo	ow -25°C		
2.4.2	Propeller				
a)	Manufacturer:	MT-Propelle	er Entwicklun	ig Gmb	H, Atting, Germany
b)	Model:	MTV-21-A/1	75-05		
C)	Propeller diameter	:: 1.75 m			
d)	Propeller speed lir	nitations			

Maximum take-off propeller speed:	2260	rpm
Maximum continuous propeller speed:	2260	rpm

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 4



2.5 POWER PLANT INSTRUMENT MARKINGS

The following table shows the power plant instrument markings and their color code significance.

Instrument ⇒	Tachometer [rpm]	Oil Temperature [°C]	Cylinder Head temperature [°C]	Oil Pressure [bar]
Red Line (minimum)		50		0.8
Green Arc (normal operating range)	535-2260	50-130		2.0 – 5.0
Yellow Arc (caution)				0.8 – 2.0 5.0 – 7.0
Red Line (maximum)	2260	130	135	7.0

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 5



2.6 OTHER INSTRUMENT MARKINGS

Instrument	Red Arc (minimum)	Green Arc (normal operat. range)	Green/Red Arc (caution)	Red Arc (maximum)
Voltmeter [V]	8 – 11	12 – 15	11 – 12	15 – 16
Ammeter [A]				

2.7 MASS LIMITS (Weight Limits)

Maximum take-off mass	750	kg
Maximum landing mass	750	kg
Max. mass in baggage compartment	40	kg

WARNING

Exceeding the weight limits may result in overloading the aircraft and a significant deterioration in flight performance and handling qualities.

2.8 CENTER OF GRAVITY LIMITS

The detailed procedure for the determination of the basic empty weight of the aircraft and the centre of gravity location is provided in section 6 of this manual. The reference datum is located at the wing leading edge, at the fuselage-wing intersection. With the aircraft horizontally levelled out, the reference datum and the vertical (perpendicular) are in one plane.

The centre of gravity must be within the following limits:

Forward limit	31% MAC = 427	mm aft of datum
Rearward limit	40% MAC = 523	mm aft of datum

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 6



WARNING

The aircraft may only be operated with a centre of gravity position within the approved operating range otherwise, the controllability and/or longitudinal stability of the aircraft as well as its overall handling qualities will be significantly reduced. The procedure to determine the centre of gravity location for flight is provided in Section 6 of this handbook.

2.9 MANEUVER LIMITS

The aircraft is type-certificated in accordance with JAR-VLA. That certification includes the following maneuvers:

- a) All normal, non acrobatic maneuvers.
- b) Stalls: static stalls with slow deceleration
- c) Steep Turns: bank angle < 60°
- d) Chandelle: entry speed 120 kts
- e) Lazy Eight: entry speed 110 kts

NOTE

All acrobatic maneuvers as well as maneuvers with bank angles exceeding 60° are prohibited.

2.10 FLIGHT LOAD FACTORS

The following flight load factor limits must be kept while performing permissible maneuvers.

Flight Load Factor [g]	with V _A	with V _{NE}	with flaps extended
Positive	4.0	4.0	2.0
Negative	-2.0	-2.0	0



Exceeding the flight load factor limits may result in damage to the aircraft structure.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 7



CAUTION

Maneuvers that include negative flight load factors are <u>not</u> permitted. Intentional spinning is <u>not</u> permitted.

2

2.11 CREW

Maximum persons on board:

Minimum crew:

1 Pilot With only one person on board, the aircraft may only be operated from the left seat.

2.12 KINDS OF OPERATION LIMITS / MINIMUM EQUIPMENT

The aircraft may only be operated under DAY-VFR and NIGHT-VFR (optional) conditions.

Minimum Equipment: Flight- and Navigation Instruments

Altimeter Airspeed indicator Magnetic compass (0 to 20,000 ft) (0 to 200 kts)

Minimum Equipment:

Power plant instruments

Fuel level indicator Low fuel pressure warning light Cyl. head temperature indicator Ammeter Voltmeter oil temperature indicator oil pressure indicator manifold pressure indicator tachometer warning light "alternator"

Minimum Equipment: Cabin

2 x safety belts



For specific operational conditions, additional equipment may be required. It is the aircraft operator's responsibility to observe the applicable national operational requirements.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 8



2.13 FUEL LIMITATIONS

		<u>Left Fuel Tank</u>		<u>Right Fuel Tank</u>		
Fuel capacity (total):		60		60	liters	
Usable fuel (total)	:	54.8		54.8	liters	
Unusable fuel:		5.2		5.2	liters	

For approved fuel grades, refer to paragraph 1.8.

2.14 DEMONSTRATED CROSSWIND COMPONENT

The maximum demonstrated crosswind component is 15.0 kts / 27.0 km/h.

WARNING

A take-off with crosswind components outside of this limit may result in the loss of aircraft controllability.

2.15 TEMPERATURE LIMITATIONS

Temperature range for aircraft operation:

Maximum temperature for take-off 15°C OAT with installed winterization Kit

Those parts of the airplane's structure which are exposed to <u>direct vertical</u> sunlight have to be colored WHITE.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 9



2.16 PLACARDS

1.) In the lower mid section of the instrument panel:

The aircraft is certified for VFR flights on day, outside of icing conditions. No aerobatic maneuvers, including spins are approved. For further operating limitations refer to POH.

2.) On the instrument panel, below the airspeed indicator:



3.) In the lower left section of the instrument panel, below the switches:

ALT / BAT	Fuel Pump	Avionics	Nav- Lights	ACL	Landing Lights	Instrument Light	Cabin Light	
-----------	--------------	----------	----------------	-----	-------------------	---------------------	----------------	--

4.) On the instrument panel, adjacent to the flap switch (the coloured strips are located on the upper surface of the left flap as a visual flap position indicator):



Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 10



Attitude

Gyro

Directional

Gyro

GPS

Trans-

ponder

Flap Control


Starter Relay

Flap

Actuator

Trim

Actuator

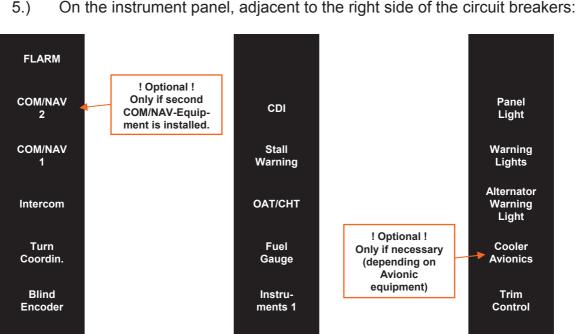

Instru-

ments 2

12V DC

Receptacle

Battery

Alternator

NOTE

On the instrument panel, adjacent to the right side of the circuit breakers:

Depending on the equipment installed in the aircraft, not every position shown above might be actually assigned with a circuit breaker. In those cases the respective positions are covered by a blank plastic plug and reserved for that application by the placard. Furthermore, the positioning of the circuit breakers can vary on early aircraft serial numbers and diverge from the arrangement shown above. In some cases, the circuit breaker for the CDI may be placed together with its correct marking on the GPS or COM/NAV 2 position of the above illustration.

6.) On the instrument panel (left section) near the magnetic compass:

		FOR	Ν	30	60	Е	120	150		
		STEER								
		FOR	s	210	240	W	300	330		
		STEER								
			DATE	:		AIR	PATH (C2300]	
Document No.:	ls	sue:	3	Supers	sedes	Issue	:	L	Date:	Page:
FM-AT01-1010-100E	В	.01	/	4.12 (17/09/	(2008)		12/()7/2012	2 - 11



7.) On the instrument panel, adjacent to the right side of the trim position indicator:



8.) In the left section of the instrument panel, adjacent to the airspeed indicator:



9.) On the instrument panel, below the fuel level indicator:



10.) On the instrument panel, below the oil pressure indicator:

OIL PRESS.

11.) On the instrument panel, below the oil temperature indicator:

OIL TEMP.

12.) On the instrument panel, below the cylinder head temperature indicator:

CYL. HEAD TEMP.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 12



13.) On the instrument panel, below the voltmeter:

Voltmeter


14.) On the instrument panel, below the amperemeter:



15.) On the control panel below the midsection of the instrument panel adjacent to the corresponding control element:



16.) On the centre pedestal, in front and behind the throttle and propeller control levers:

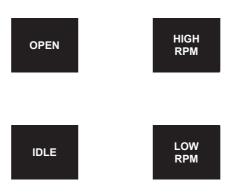

17.) On the centre pedestal adjacent to the trim control switch:

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 13



18.) On the centre pedestal below the fuel selector/shut-off valve:



19.) On the centre pedestal below the parking brake control lever:



 
- 20.) On the inner as well as the outer side of the left canopy frame in front and behind the canopy release handle:
 - a) Left side of each canopy release handle:



b) Right side of each canopy release handle:



21.) On the centre pedestal between the seats:



Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 14



22.) On the inner surface of the baggage compartment door:



23.) On the brake fluid reservoir at the firewall in the engine compartment:

HYD. BRAKE
FLUID (FLUID 4)

24.) On the inner surface of the service opening in the upper engine cowling:

! CAUTION ! DO NOT use aviation grade oil Refer to POH

25.) On the oil filler cap (oil tank cover):

OIL CAPACITY 3,0 (I) **REFER to POH**

26.) On the engine coolant overflow bottle:




27.) On the engine coolant expansion tank:

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 15

COOLANT DO NOT OPEN



 28.) On both wings, forward of the fuel filler caps (relating to flight direction):



29.) On the outer surface of the fuselage at the position of the ELT (if installed)



30.) Adjacent to the fuel drain valves on the lower surface of both wings and the front fuselage (located on 3 positions):

FUEL DRAIN

31.) Adjacent to the tie-down points under both wings and on both sides of the tail skid (located on 4 positions):

TIE DOWN

32.) On each wheel fairing of the main landing gear:

2,5 bar

33.) On the nose gear wheel fairing above the cut-out for the valve (left side):

2,0 bar

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 16



34.) On right side of the instrument panel, adjacent to the 12 VDC receptacle (if installed):



35.) On the instrument panel, adjacent to the ELT remote control switch (if installed):



36.) Directly on the jack up points under the right and left wing-fuselageintersection:



37.) Adjacent to the jack-up points under the right and left wing-fuselageintersection:

Jack Point

38.) Above or below the Warning Lights on the instrument panel:



39.) On the lower engine cowling, well visible adjacent to the outlet of the exhaust tailpipe:



Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 17



40.) At the front side of the lower engine cowling, above the cooling air inlet or well visible on the air inlet duct:

WINTER KIT MUST BE REMOVED ABOVE 15°C (59°F) WINTER KIT SHOULD BE INSTALLED BELOW 5°C (41°F)

41.) On the upper surface of each flap near its inboard edge:



42.) On the upper surface of each flap along its trailing edge near the inboard end:

NO STEP or PUSH

43.) On the upper surface of each elevator near its inboard edge, on both sides of the rudder as well as on the upper surface of the vortex generator on the left side of the fuselage (located on 5 positions per aircraft):



Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 18



- 44.) This placard is located at the following positions (altogether 6 per aircraft):
 - a) On the upper surface of both winglets along its trailing edge (inboard directed surface).
 - b) On the upper surface of both elevators along their trailing edges near their inboard end.
 - c) On both sides of the rudder along the trailing edge.



45.) On the firewall adjacent to the brake fluid reservoir:

! CAUTION !
DO NOT use automotive
brake fluid.
Refer to POH

46.) On the access door for the external power socket in the lower engine cowling (optional, only if external power socket is installed):



47.) In the middle section of the instrument panel below the NAV/COMequipment and the Multifunctional Display:

GPS FOR VFR NAVIGATION ONLY


48.) On the right side wall of the centre pedestal adjacent to the adjusting knob:

Friction Lock Power / Prop

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 19



 49.) In the upper right section of the instrument panel:



50.) In the middle section of the instrument panel, directly on the left side of the corresponding NAV-/COM-equipment (optional, only if a second NAV-/ COM-Transceiver is installed):

COM/NAV 1

COM/NAV 2

51.) In the right section of the instrument panel, directly underneath the FLARM-Display Unit (optional):

FOR INFO IN VMC ONLY

2.17 RESERVED

[Intentionally left blank]

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	2 - 20



SECTION 3

EMERGENCY PROCEDURES

		Page
3.1	INTRODUCTION	3-3
3.2	AIRSPEEDS FOR EMERGENCY OPERATION	3-3
3.3	ENGINE FAILURES	3-4
3.3.1	Engine Failure During Take-off Run	3-4
3.3.2	Engine Failure Immediately After Take-off	3-4
3.3.3	In-Flight Engine Failure	3-4
3.3.4	Power-Off Landing	3-7
3.4	PRECAUTIONARY LANDING WITH ENGINE POWER	3-7
3.5	SMOKE AND FIRE	3-8
3.5.1	Engine Fire on Ground	3-8
3.5.2	In-Flight Engine Fire	3-8
3.5.3	Electrical Fire and Formation of Smoke on Ground	3-8
3.5.4	In-Flight Electrical Fire and Formation of Smoke	3-9
3.5.5	In-Flight Cabin Fire	3-9
3.6	INADVERTENT ENCOUNTER OF ICING CONDITIONS	3-9
3.7	SPIN RECOVERY PROCEDURE	3-10
3.8	POWER-OFF GLIDING	3-10
3.9	LANDING WITH A FLAT TIRE	3-11
3.10	ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS	3-11
3.10.1	Complete Failure of Electrical System	3-11
3.10.2	Alternator Failure	3-11
3.10.3	Low Voltage Indication	3-12

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 1



		Page
3.11	FLAP CONTROL SYSTEM MALFUNCTIONS	3-13
3.12	TRIM CONTROL SYSTEM FAILURES	3-14
3.12.1	Trim System Inoperative	3-14
3.12.2	Trim Actuator Does Not Stop as Desired	3-14
3.13	AVIONICS MALFUNCTIONS	3-15
3.13.1	Complete Avionics Failure	3-15
3.13.2	Receive Mode Failure of COM-Equipment	3-15
3.13.3	Transmit Mode Failure of COM-Equipment	3-15
3.14	STARTER MALFUNCTION	3-15
3.15	IN-FLIGHT FAILURES AND MALFUNCTIONS	3-16
3.15.1	Self-Actuating Release and Opening of the Canopy in flight	3-16

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 2



3.1 INTRODUCTION

This section provides checklists with the recommended procedures for coping with various emergency situations.

Emergencies caused by aircraft or engine malfunctions are extremely rare if all pre-flight inspections and required maintenance activities are conducted properly.

Nevertheless, if an emergency situation does occur, the basic procedures provided here are recommended to correct the problem and to master the situation.

However, it is impossible to account for all kinds and combinations of emergencies that may arise during operation in this manual. Therefore, the pilot must be familiar with the aircraft, its systems and its flight behavior. Sound judgment and sufficient knowledge of the aircraft and its systems are of paramount importance in this respect.

3.2 AIRSPEEDS FOR EMERGENCY OPERATION

Airspeed (IAS)	[kts]
Maneuvering speed V _A	112
Speed for best glide flaps up flaps in take-off position	78 73
Precautionary landing with engine power flaps down	60
Landing without engine power flaps in take-off position flaps up	65 70

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 3



3.3 ENGINE FAILURES

3.3.1 Engine Failure During Take-off Run

- 1. Throttle
- 2. Brakes

IDLE APPLY as required

3.3.2 Engine Failure Immediately After Take-off

- A) **ENGINE POWER LOSS**
- 1. Throttle

Electrical fuel pump 2.

- 3. Airspeed
- Propeller control lever 4.
- Fuel selector valve 5.
- 6. Choke
- 7. Carburetor heat
- 8. Ignition switch

ON 70 KIAS **HIGH-RPM** position SWITCH to fullest tank OFF ON BOTH

WARNING

full OPEN

If engine power cannot be restored immediately, an emergency landing must be initiated under consideration of local conditions and the circumstances of the particular situation:

Before landing:

- 9. Fuel selector valve
- 10. Ignition switch
- ALT/BAT switch 11



OFF

OFF

If BAT switch is in OFF position:

Stall warning system is inoperative!

3.3.3 In-flight Engine Failure

A) **ENGINE ROUGHNESS**

- 1. Carburetor heat
- 2. Electrical fuel pump 3.
- ON ON
- Ignition switch
- SWITCH through the positions L-BOTH, then
- R-BOTH

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 4

Ac	QUILA Avia	ition		IE FLIGHT MANU/ QUILA AT01		ction 3 Y PROCEDURES
4.	Throttle			Do not change	e position	
	If roughness	s contin	ues:			
5.	Throttle			REDUCE to m	ninimum required	for flight
6.	Precautiona	ry land	ing	PERFORM		
B)	LOSS OF O	IL PRE	SSURE			
1.	Oil temperat	ture		CHECK		
lf oil p	pressure falls	below	the green	arc while oil tempe	rature remains no	ormal:
2.				Land at the ne	arest airfield	
lf oil p	pressure falls	below	the green	arc and is accompa	anied by a rise in	oil temperature:
3. 4.	Throttle Precautionary landing		PERFORM	Be aware that sudden engine failure may occur		
C)	LOSS OF F	UEL PI	RESSURE	<u>.</u>		
1. 2. 3.	Electrical fue Fuel selecto Electrical fue	r valve		ON SWITCH to fu ON	llest tank	
				NOTE		
	Fuel pressure will not be restored after switching fuel tanks until empty fuel lines have refilled. This process may take up to eight seconds.					
4.	If the low fue	el press	sure warni	ng light remains ali Land at the ne <u>Be aware that</u> <u>anytime!</u>	•	<u>illure may occur</u>
D)	ENGINE RESTART PROCEDURE WITH STOPPED PROPELLER					
1. 2. 3. 4.	Non-essential electricalequipmentOFFBAT switchONPropeller control leverHIGH-RPM positionFuel selector valveSWITCH to fullest tank					
Do	cument No.:	ls	ssue:	supersedes Issue:	Date:	Page:
FM-A	Г01-1010-100E	I	3.01	A.12 (17/09/2008)	12/07/2012	3 - 5

Aviation 1		E FLIGHT MANUAL UILA AT01	Section 3 EMERGENCY PROCEDURES		
5. 6. 7. 8. 9.	Electrical f Throttle Choke Ignition sw Ignition sw	(hot e (cold (hot e (cold itch	p engine) engine) engine) engine)	ON 2 cm OPENED IDLE OFF PULL BOTH START	
Whe	n power is re	estored:			
10. 11. 12. 13.	Oil pressur Choke Electrical e Oil tempera	equipme	nt	CHECK OFF SWITCH ON as r CHECK	equired

The engine can also be started by windmilling if the airspeed is approx. 120 kts. Altitude loss in glide to reach this airspeed is approximately 1000 ft / 300 m.

NOTE

E) RESTART PROCEDURE WITH PROPELLER IN WINDMILLING CONDITION

With engine power off and airspeeds above 60 kts the propeller auto-rotates.

1.	Airspeed		76 KIAS
2.	BAT switcl	า	ON
3.	Fuel selec	tor valve	SWITCH to fullest tank
4.	Propeller of	control lever	HIGH-RPM position
5.	Electrical f	uel pump	ON
6.	Ignition sw	vitch	BOTH
7.	Throttle	(hot engine)	2 cm OPENED
		(cold engine)	IDLE
8.	Choke	(hot engine)	OFF
		(cold engine)	PULL

When power is restored:

9.	Oil pressure	CHECK
10.	Choke	OFF
11.	Electrical equipment	SWITCH ON as required
12.	Oil temperature	CHECK

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 6



3.3.4 Power-off Landing

A) EMERGENCY LANDING WITHOUT ENGINE POWER

- 1. Airspeed Flaps in landing position Flaps in take-off position
 - Flaps in cruise position
- 2. Fuel selector valve
- 3. Ignition switch
- 4. Seat belts and harnesses
- 5. COM (ATC)
- 6. ALT/BAT switch

60 KIAS 65 KIAS 70 KIAS OFF OFF TIGHT REPORT location and intention OFF

WARNING

If ALT/BAT switch is in OFF-Position: Stall warning system is inoperative!

3.4 PRECAUTIONARY LANDING WITH ENGINE POWER

It may be advisable to make an off-airport landing while power is still available, particularly if the continuation of the flight represents a danger for the occupants or the aircraft. Reasons for this may be unexpected bad weather conditions, low fuel, technical trouble or the physical condition of an occupant deteriorating vastly.

NOTE

- 1. Locate suitable field
- 2. Seat belts and harnesses
- 3. Initiate descent
- 4. Selected field

CONSIDER wind direction, terrain and obstructions. TIGHT

FLY OVER (Altitude > 500 ft), checking conditions (wind direction, obstructions, slope and condition of the field)

- 5. CHECK before turning into final approach: Throttle AS REQUIRED Propeller control lever HIGH-RPM Position Carburetor heat ON Electrical fuel pump ON Flaps Extended Airspeed 60 KIAS
- 6. Touch down with lowest possible airspeed.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 7



7. After touchdown: Brakes

Fuel selector valve Ignition switch ALT/BAT switch APPLY as required OFF OFF OFF

OFF

OFF

OFF

FULL OPEN

EVACUATE

3.5 SMOKE AND FIRE

3.5.1 Engine Fire On Ground

- 2. Throttle
- 3. ALT/BAT switch
- 4. Ignition switch
- 5. Aircraft

3.5.2 In-flight Engine Fire

1.	Fuel selector valve	OFF			
2.	Airspeed	90 KIAS			
3.	Flaps	TAKE-OFF Position			
4.	Throttle	FULL OPEN			
5.	Cabin heat	OFF			
6.	Canopy slide-window	FULL OPEN			
7.	Proceed with power-off landing in accordance with 3.3.4 A)				

3.5.3 Electrical Fire and Formation of Smoke on Ground

1.	ALT/BAT switch	OFF

If engine is running:

2.	Throttle	IDLE
3.	Fuel selector valve	OFF
4.	Ignition switch	OFF
5.	Canopy	OPEN
6.	Fire extinguisher (if installed)	ACTIVATE as required

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 8

OFF OPEN

FULL OPEN

Section 3 EMERGENCY PROCEDURES

3.5.4 In-flight Electrical Fire and Formation of Smoke

- 1. BAT switch
- 2. Cabin vents
- 3. Canopy slide-window
- 4. Fire extinguisher (if installed)

3.5.5 In-flight Cabin Fire

- 1. BAT switch
- 2 Cabin vents
- 3. Cabin heat
- 4. Fire extinguisher (if installed)
- 5. If necessary, prepare safety landing.

3.6 INADVERTENT ENCOUNTER OF ICING CONDITIONS

In the event of an inadvertent icing encounter, use the following procedure:

- 1. Carburetor heat
- 2. Propeller RPM
- 3. Cabin heat
- 4. Immediately leave the region in which the icing has occurred. (Change flight altitude and/or turn back)
- 5. Move the control surfaces periodically, to keep them moveable.

CAUTION

With ice accumulation on the wing leading edge, stalling speed increases.

CAUTION

With ice accumulation on the wing leading edge, the airspeed indicator, the altimeter and the vertical speed indicator readings may be inaccurate. The stall warning system may be inoperative or may not work properly.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 9

OFF OPEN OFF ACTIVATE as required

ACTIVATE as required



INCREASE ON



3.7 SPIN RECOVERY PROCEDURE

- 1. Rudder
- 2 Throttle retard to
- 3. Elevator control move forward to
- 4. Rudder - return to
- 5. Ailerons - return to
- 6. Flaps
- 7. Rudder - return to
- Elevator control 8.

APPLY FULL DEFLECTION OPPOSITE to direction of rotation **IDIF** NEUTRAL (far enough to terminate the

stall) NEUTRAL as soon as the rotation stops

NEUTRAL

RETRACT if extended

NEUTRAL as soon as the rotation stops cautiously PULL OUT of the dive by applying back pressure on the stick

Make a smooth recovery from the dive to regain level flight attitude. Do not exceed V_{NE} .

WARNING

During spin recovery, the sequence of actions stated above is mandatory !

3.8 **POWER-OFF GLIDING**

Depending on flight altitude and current wind conditions, achievable gliding distances may be different to reach a suitable field or a near-by airfield.

For optimal power-off gliding, consider the following:

- 1. Flaps
- 2. Airspeed
- 3. Demonstrated glide ratio

RETRACTED **78 KIAS** 14 i.e., a glide distance of 4 km results in an altitude loss of 1000 ft. (with no wind)

NOTE

Headwinds or tailwinds have a great influence on the achievable gliding distance.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 10





LANDING WITH A FLAT TIRE 3.9

For a landing with a suspected or defective tire, use the following procedure:

- 1. Flaps LANDING position
- 2. Perform touch down on that side of the runway that is opposite to the defective tire, in order to have the complete width of the runway to correct direction changes caused by the defective tire.
- 3. Perform touch down with intact main tire first. Touch down nose wheel as soon as possible to obtain a better controllability of the aircraft on the ground.
- 4. While taxiing, move aileron control fully to the side of the intact main tire, to unload the defective one.
- 5. When landing with a flat nose wheel tire:

Touch down with minimum speed. Hold nose wheel off the ground as long as possible.

3.10 ELECTRICAL POWER SUPPLY SYSTEM MALFUNCTIONS

3.10.1 Complete Failure of Electrical System

- 1. Battery circuit breaker **RESET** if tripped
- 2. ALT/BAT switch
- 3. If power is not restored Land at the nearest airfield if practical

3.10.2 Alternator Failure

ALTERNATOR warning light illuminates:

- 1 ALTERNATOR switch SWITCH OFF then ON
- 2. Alternator circuit breaker

RESET if tripped

CHECK if ON

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 11



3. If the ALTERNATOR warning light remains alight:

- ALTERNATOR switchOFFCabin lightOFFLanding lightOFFAnti-collision lightOFFNAV-lightsOFFDevices connected at the 12 VDC receptacleOFF
- 4. Observe the voltmeter and ammeter readings.
- 5. Land at the nearest airfield if practical.



The battery is able to supply the electrical system with power for approx. 90 min with an average rate of discharge of 8 Ampere-hours.

3.10.3 Low Voltage Indication

- A) Low voltage indication <u>on the ground</u> (needle in <u>green-red shaded ARC or below</u>)
- Engine speed Increase RPM until the needle moves into the GREEN ARC region. (RPM should be below 1350)
 All non-essential equipment Turn off, until the needle moves into the GREEN ARC region.
 If the needle remains on the
 - green-red shaded arc or below and the ammeter shows discharge (needle deflects to the left side) Do

Do not fly before problem is eliminated.

- B) Low voltage indication in flight (needle in green-red shaded ARC or below)
- 1. All non-essential equipment

Turn off, until the needle moves into the GREEN ARC region.

2. If the needle remains on the green-red shaded arc or below and the ammeter shows discharge (needle deflects to the left side)

Alternator is defective. Proceed in accordance with para. 3.10.2

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 12



- C) Low voltage indication <u>while landing</u> (needle in <u>green-red shaded ARC or below</u>)
- 1. After landing

Proceed in accordance with 3.10.3 A)

WARNING

Whenever the needle of the voltmeter is within the RED ARC, land at the nearest airfield to eliminate the problem before continuing the flight.

3.11 FLAP CONTROL SYSTEM MALFUNCTIONS

Flap position indicator or flap actuator malfunction.

- "Flaps" circuit breaker RESET, if tripped
 Flap position CHECK visually at the left wing
 Airspeed within the WHITE RANGE on the airspeed indicator
- 4. Flap switch

SWITCH through all positions.

If the flap actuator is inoperative or the flap position indicator reading is incorrect, the landing approach should be conducted with a safe airspeed for the current flap position.

WARNING

Landing with flaps <u>not in the landing position</u> increases the stalling speed and the landing distance.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 13



3.12 TRIM CONTROL SYSTEM FAILURES

3.12.1 Trim System Inoperative

- 1. "Trim Actuator" circuit breaker
- 2. Trim switch

RESET, if tripped PRESS "Nose UP" and then "Nose Down" for several times.

NOTE

An inoperative trim system does not affect aircraft controllability. However, the control stick forces are considerably higher and may reach up to 100 N.

3. Land as soon as practical.

3.12.2 Trim Actuator Does Not Stop as Desired

- 1. Control stick
- 2. "Trim Actuator" circuit breaker
- 3. Trim switch

HOLD in position PULL CHECK, whether pressed, jammed, etc.

If the problem is obvious, and can be solved:

4. "Trim Actuator" circuit breaker

RESET

NOTE

The trim setting from full nose-down to full nose-up trim position, or vice versa, takes approx. 8 seconds.

If the problem cannot be eliminated:

Land at nearest airfield.

 Document No.:
 Issue:
 supersedes Issue:
 Date:
 Page:

 FM-AT01-1010-100E
 B.01
 A.12 (17/09/2008)
 12/07/2012
 3 - 14

4.



3.13 AVIONICS MALFUNCTIONS

3.13.1 Complete Avionics Failure

1.	AVIONICS Master Switch	SWITCH OFF then ON. The avionics
main		switch is an automatic circuit protective
		switch. If the switch trips again:

2. Land at the nearest suitable airfield.

3.13.2 Receive Mode Failure of COM-Equipment

1.	Push-to-Talk (PPT) switch	CHECK pilot's and co-pilot's PTT-switches whether pressed, jammed, etc. (check also on transceiver display).
0		CHECK connectors.
2.	Head-set	SWITCH off squelch momentarily.
		If no noise is audible:
		CHECK Head-set connectors.

3.13.3 Transmit Mode Failure of COM-Equipment

1.	"T" symbol	CHECK whether displayed while
		transmitting.
2.	Selected frequency	CHECK
3.	Microphone	CHECK, if necessary replace
		head-set.

If the problem cannot be eliminated, set the transponder code to 7600 as required.

3.14 STARTER MALFUNCTION

During engine start, the starter does not decouple from engine (a continuous and excessive howling tone is audible).

1. Throttle

IDLE

2. Ignition switch

OFF

3. Repair damage before conducting planned flight.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 15



3.15 IN-FLIGHT FAILURES AND MALFUNCTIONS

3.15.1 Self-Actuating Release and Opening of the Canopy in flight

In the case of a self-actuating release and opening of the canopy in flight, a stationary canopy opening angle of about $20^{\circ} \pm 10^{\circ}$, depending on the flight condition, is reached where the aerodynamic forces exerted on the canopy are in equilibrium. Since the canopy is opened forwards, the canopy cannot be torn off by the air flow as a consequence of self-actuating opening in flight. Even though the airflow conditions around the aircraft change considerably with an open canopy in flight, the aircraft remains fully controllable. Initial flight attitude changes can be easily corrected. Do not unbuckle the seat belt in order to close the canopy. During solo flights, carefully try to close the canopy without neglecting flight tasks and pilot responsibilities. If this is not possible, continue the flight with the open canopy and land at the nearest airfield.

1. Keep calm, there is no imminent danger.

2.	Flight attitude Airspeed	Stabilize flight attitude, establish a stationary horizontal level flight condition considering the actual conditions. 65 – 75 KIAS
3.	Surrounding airspace	Check for obstacles and other traffic.
4.	Canopy	Close and lock canopy in flight if possible. Check the canopy locking and the position of the Canopy Locking Lever continuously until landing. If this is not possible to close the canopy, continue flight with the open canopy and land at the nearest airfield.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	3 - 16



SECTION 4

NORMAL PROCEDURES

		Page
4.1	INTRODUCTION	4-2
4.2	AIRSPEEDS FOR NORMAL OPERATION	4-3
4.3	RESERVED	4-5
4.4	PRE-FLIGHT INSPECTION	4-6
4.4.1	Daily Pre-flight Check	4-6
4.4.2	Check Before Every Flight	4-11
4.5	CHECKLISTS FOR NORMAL PROCEDURES	4-13
4.5.1	Before Engine Start-up	4-13
4.5.2	Engine Start-up	4-13
4.5.3	Before Taxiing	4-14
4.5.4	Taxiing	4-14
4.5.5	Before Take-off (at the Taxi Holding Position)	4-15
4.5.6	Take-off	4-16
4.5.7	Climb	4-16
4.5.8	Cruise	4-17
4.5.9	Descent	4-17
4.5.10	Landing	4-17
4.5.11	Balked Landing	4-18
4.5.12	After Landing	4-18
4.5.13	Engine Shutdown	4-19
4.5.14	Flight in Heavy Rain and/or with Strongly Soiled Wings	4-19
	Intentionally left blank	4-20

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 1

4.1 INTRODUCTION

This section provides normal operating procedure checklists for the aircraft as well as recommended airspeeds.

Additional information is provided in the Operators Manual for ROTAX® engine Type 912 series and in the Operation and Installation Manual of mt-Propeller®, latest revision.

Normal procedures associated with optional equipment can be found in Section 9.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 2

4.2 AIRSPEEDS FOR NORMAL OPERATION

The following airspeeds are based on the maximum take-off weight of 750 kg. They may be also used for any lower operational weight.

TAKE-OFF				
Airspeed (IAS)	KIAS			
Normal climb speed at 50 Feet (Flaps in take-off position (17°))	57			
Best rate of climb speed V_Y at sea level (Flaps UP (cruise position))	65			
Best angle of climb speed V_x at sea level (Flaps in take-off position (17°))	52			

LANDING				
Airspeed (IAS)	KIAS			
Final approach speed for landing (Flaps in landing position (35°))	60			
Balked landing (Flaps in landing position (35°))	60			
Maximum demonstrated crosswind velocity for take-off or landing	15			

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 3



CRUISE				
	Airspeed (KIAS)	KIAS		
Maneuvering speed	V _A	112		
Maximum turbulent air operating speed	V _{NO}	130		
Maximum flap extended speed	V _{FE}	90		

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 4



4.3 RESERVED

[Intentionally left blank]

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 5

4.4 PRE-FLIGHT INSPECTION

4.4.1 Daily Pre-flight Check

- A) CABIN
- 1. Papers
- 2. Ignition key
- 3. BAT Switch
- 4. Warning lights (alternator, fuel pressure)
- 5. Engine instruments
- 6. Fuel quantity
- 7. External lights
- 8. BAT switch
- 9. Foreign objects
- 10. ELT
- 11. Baggage
- 12. Canopy


CHECK on board REMOVED ON ALIGHT

CHECK CHECK CHECK for proper operation OFF CHECK and REMOVE CHECK STOWED and SECURED CHECK for damage and cleanliness

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 6



B) EXTERIOR CHECK, Visual Inspection

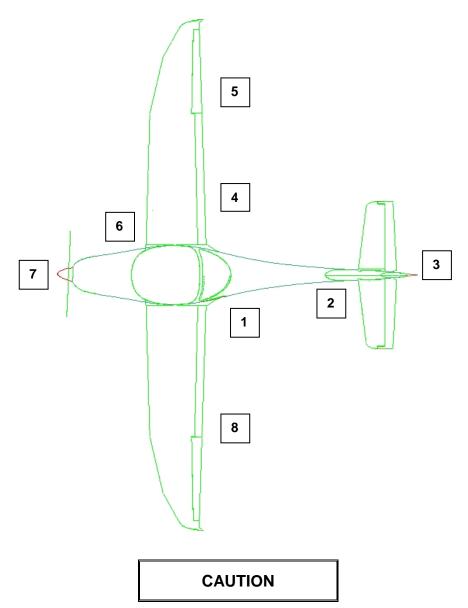

In this manual, visual inspection means the following: Inspection for mechanical damage, dirt, cracks, delamination, excessive play, looseness, leakages, incorrect attachment, foreign objects and general condition. Control surfaces: additional functional check for free movement.

Left main landing gear 1.

a) Landing gear strut b) Wheel fairing

Visual inspection Visual inspection

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 7

AQ	UILA Avia	tion	IE FLIGHT MANU QUILA AT01	JAL		ction 4 PROCEDURES
	c) Tire press d) Tire slip n e) Tire, whe f) Brake cho	narking el, brake				
2.	<u>Tail boom</u>	shall		Vieu	alincraction	
	a) Tail boom b) Skid plate c) Tail tie-do)		Visu	al inspection al inspection CONNECT	
3.	Empennage					
	a) Elevator b) Horizonta c) Rudder	l stabilizer		Visu Visu CHE	al inspection al inspection al inspection, ECK: fitting and nection, proper	
	d) Vertical s	tabilizer			nection and scr al inspection	rew locking.
4.	Right main l	anding gear				
	a) Landing g b) Wheel Fa c) Tire press d) Tire slip n e) Tire, whe f) Brake cho	iring sure narking el, brake		Visu CHE CHE Visu		
5.	Right wing					
	e) Wing tip, f) Fuel level g) Fuel tank	nd inspection win NAV-lights and A filler cap	dow \CL Visual	CHE Visu Visu insp CHE with leve CHE	ECK with dipstic the indicated f I in the cockpit ECK if closed	uel
	h) Fuel tank i) Wing tie-c			and	AIN, check for v deposits CONNECT	พลเษา
Do	cument No.:	Issue:	supersedes Issue:		Date:	Page:
FM-A	Г01-1010-100E	B.04	B.01 (12/07/2012)		13/04/2015	4 - 8



6. <u>Nose section, cowling</u>

WARNING

Before cranking the propeller: Switch OFF the battery and ignition circuits, activate parking brake.

WARNING

Risk of burning and scalding Carry out pre-flight checks on the cold engine only !

a) Check oil level

Prior to the oil check, turn the propeller several times in the <u>direction of engine rotation</u> to pump oil from the engine back into the oil tank.

This process is completed when air returns to the oil tank and is indicated by a rustling from the open oil tank. Now check oil level which should be between the min. and max. markings of the oil but must never be below the min. marking. Volume difference between the min. and max. markings is 0.45 liter.

NOTE

The oil specification in paragraph 1.9.1 must be observed !

b) Check coolant level

Verify coolant level in the **expansion tank**, replenish to maximum if required. (coolant level in expansion tank should be at least 2/3 or visible at the gauge-glass)

Verify coolant level in the **overflow bottle**, replenish as required. The coolant level must be between the min. and max. markings on the overflow bottle.

NOTE

The coolant specification in paragraph 1.9.2 must be observed !

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 9



- c) Air intakes (4 NACA intakes)
- d) Radiator / oil cooler intake
- e) Cowling
- f) Propeller
- g) Propeller blades
- h) Spinner dome
- i) Electr. fuel pump drain valve
- 7. <u>Nose landing gear</u>
 - a) Nose gear strut
 - b) Wheel fairing
 - c) Tire pressure
 - d) Tire slip marking
 - e) Tire, wheel
 - f) Shock absorber unit
 - g) Brake chocks and tow bar
- 8. Left wing
 - a) Entire wing surface
 - b) Fuel vent
 - c) Battery
 - d) Stall warning system
 - e) Battery f) Pitot / static head
 - g) Wing tip, NAV-lights and ACLh) Aileron and inspection platesi) Fuel level
 - j) Fuel tank drain valve
 - k) Fuel tank filler capl) Flapm) Wing tie-down

- CHECK if clear CHECK if free from obstructions Visual Inspection CHECK Camloc fasteners Visual inspection CHECK for cracks and other damage Visual inspection DRAIN, check for water and deposits
- Visual inspection Visual inspection CHECK CHECK Visual inspection Visual inspection REMOVE
- Visual inspection CHECK if clear ON Carefully move the small plate on the transmitter upwards until the stall warning is audible OFF **REMOVE** cover. CHECK if all holes are clear Visual inspection Visual inspection CHECK with dipstick and verify with the indicated fuel level in the cockpit DRAIN, check for water and deposits CHECK if closed Visual inspection DISCONNECT

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 10



4.4.2 Check Before Every Flight

NOTE

The fuel level dipstick for checking the fuel tank level is stored on the inner side of the baggage compartment door.

- 1. Daily pre-flight inspection
- 2. Tow bar
- 3. Fuel quantity

CHECK if removed.

Completed

CHECK with fuel level dipstick and verify with indicated fuel level in the cockpit.



ONLY for aircrafts equipped with capacitive fuel probes and Westach Dual Fuel Gauge 2DA4V (see equipment list):

If AVGAS 100LL, UL91 or mixtures of different grades of fuel are filled into the tanks, a lower amount of fuel than is actually in the tank will be indicated. This situation must be kept in mind during the flight.

WARNING

Before cranking the propeller: Switch OFF the battery and ignition circuits, activate parking brake.

WARNING

Risk of burning and scalding

Carry out pre-flight checks on the cold engine only !

4. Check oil level

Prior to the oil check, turn the propeller several times in the direction of engine rotation to pump oil from the engine back into the oil tank.

This process is completed when air returns to the oil tank and is indicated by a rustling from the open oil tank. Now check oil level which should be between the min. and max. markings of the oil but must never be below the min. marking. Volume difference between the min. and max. markings is 0.45 liter.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 11



NOTE

The oil specification in paragraph 1.9.1 has to be observed !

5. Check coolant level

Verify coolant level in the **overflow bottle**, replenish as required. The coolant level must be between the min. and max. markings on the overflow bottle.

NOTE

The coolant specification in paragraph 1.9.2 has to be observed !

- 6. Tie-down straps
- 7. Baggage door
- 8. Pitot cover
- 9. Flight controls
- Carburetor heat 10.
- 11. Cabin heat
- 12. Choke
- 13. Throttle
- 14. Propeller control lever
- Trim system (indication and function) 15.
- Flaps (pos. indication and function) 16.
- removed. CHECK if closed CHECK if removed. CHECK for proper operation CHECK for free movement, then set to the OFF-Position CHECK for free movement, then set to the OFF-Position CHECK for free movement, CHECK if self-resetting (move throttle) CHECK for free movement, then set to the IDLE-Position CHECK for free movement, then set to the HIGH-RPM position CHECK, set full "nose-down" and "nose-up" positions CHECK, extend fully and then retract

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 12



Section 4 NORMAL PROCEDURES

4.5 CHECKLISTS FOR NORMAL PROCEDURES

4.5.1 Before Engine Start-up

- 1. Daily pre-flight check
- 2. Passenger briefing
- 3. Seats
- Seat belts and harnesses 4.
- 5. Canopy
- 6. Parking brake
- 7. Control stick
- 8. Fuel selector valve
- 9. Carburetor heat
- 10. Throttle
- Propeller control lever 11.
- **AVIONICS** switch 12:
- 13. ALT/BAT switch
- 14. Generator warning light
- Fuel pressure warning light 15.
- 16. Anti-collision light
- 17. **Circuit breakers**

4.5.2 Engine Start-up

- 1. Electrical fuel pump
- 2 Fuel pressure warning light
- 3. Throttle - cold engine
 - hot engine
 - Choke - cold engine - hot engine
- 5. Brakes

4.

- Propeller area 6.
- 7. Ignition switch
- 8. Oil pressure gauge

COMPLETED COMPLETED ADJUST as required **FASTENED** and **TIGHTENED** CLOSED and LOCKED CHECK if vibrations cause the canopy lock to release SET CHECK for free movement and correct control surface deflections SWITCH to fullest tank OFF IDLE **HIGH-RPM** position OFF ON **ILLUMINATES** ILLUMINATES ON CHECK if all pushed in

ON Does not illuminate IDLE 2 cm OPENED PULL OFF SET CHECK if clear START CHECK, oil pressure should build up into the green arc range within 10 seconds.

CAUTION

If the oil pressure does not reach at least 1.5 bar within 10 seconds after engine start-up, immediately shut down the engine !

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 13



NOTE

The oil pressure may rise into the YELLOW ARC RANGE as long as the oil temperature is below the normal operating temperature.

NOTE

If the engine does not start within 10 seconds, disengage the starter and try again after a cooling down phase of at least 2 minutes. DO NOT continuously operate the starter motor over a period of more than 10 seconds.



For a successful engine start-up, the propeller speed must reach at least 100 RPM. This should be considered when having engine start-up problems during cold weather operations or with a partially discharged battery.

- Alternator warning light 9.
- 10. NAV -lights
- 11. Electrical fuel pump

4.5.3 Before Taxiing

- 1. AVIONICS switch
- 2. Avionics and flight instruments
- 3. Engine instruments
- 4 Voltmeter

OFF AS REQUIRED OFF

ON SET UP CHECK CHECK if needle is within the green range

CAUTION

Warm up the engine for approx. 2 min at 820 RPM and then at 1030 RPM until the oil temperature reaches 50°C (latter can be done during taxiing).

4.5.4 Taxiing

- 1. Parking brake
- 2. Nose wheel steering
- 3. Brakes
- 4. Flight instruments and avionics
- 5. Compass reading/gyro instruments

RELEASE CHECK function and for free movement CHECK CHECK CHECK

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 14



CAUTION

Do not operate the engine at high RPM when taxiing to prevent stone chipping or other damage by foreign objects or splashed water.

4.5.5 Before Take-off (at the Taxi Holding Position)

1. 2. 3. 4. 5. 6.	Brakes Parking brake Fuel selector valve Fuel pressure warning light Throttle Propeller control lever	APPLY SET SWITCH to fullest tank OFF (<u>otherwise abort flight)</u> SET 1700 RPM. SWITCH 3 times b/w HIGH- and LOW-RPM positions (end stops) CHECK RPM drop: 200±50 RPM. Thereafter: SET HIGH-RPM pos.
7. 8.	Throttle Ignition switch	SET 1700 RPM. Magneto check: SWITCH through: "L-BOTH-R-BOTH" – positions. CHECK RPM-drop (max. RPM-drop: 120; max. difference L/R: 50, min. difference: the drop must be noticeable). Thereafter: SWITCH to BOTH.
9.	Carburetor heat	ON RPM-drop: 20 to 50 RPM
10. 11. 12. 13. 14. 15. 16. 17. 18. 19.	Carburetor heat Throttle Electrical fuel pump Flaps Trim Engine instruments Circuit breakers Control stick Seat belts and harnesses Canopy	OFF IDLE ON TAKE-OFF position TAKE-OFF position CHECK if within the green range CHECK if all pushed in CHECK for free movement FASTENED and TIGHTENED CLOSED and LOCKED CHECK if vibrations cause the canopy lock to release
20.	Parking brake	RELEASE

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 15

4.5.6 Take-off

CAUTION

To increase throttle raise RPM first then increase manifold pressure second. To decrease throttle lower manifold pressure first then decrease RPM second.

- 1. Throttle
- 2. Tachometer
- 3. Elevator control
- 4. Rudder pedals
- 5. Lift nose wheel
- 6. Climb speed

FULL OPEN CHECK if within 2200-2260 RPM NEUTRAL at initial ground roll HOLD direction 50 KIAS 65 KIAS

CAUTION

For the shortest take-off distance over a 50-feet obstacle:

- 7. Lift nose wheel
- 8. Climb speed

4.5.7 Climb

- 1. Propeller control lever
- 2. Throttle
- 3. Engine instruments
- 4. Flaps
- 5. Climb
- 6. Electrical fuel pump
- 7. Trim

SET 2260 RPM OPEN CHECK CRUISE position at 65 KIAS OFF SET as required

NOTE

The best rate-of-climb speed V_Y is a function of the operating mass and decreases with increasing altitude. For more information, refer to Section 5.2.6.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 16

50 KIAS 57 KIAS



4.5.8 Cruise

- 1. Throttle
- 2. Propeller control lever

AS REQUIRED (Ref. to Section 5) SET between 1650 and 2260 RPM



Continuous operation at maximum manifold pressure with propeller speed below 2140 RPM should be avoided to minimize engine wear, especially at pressure altitudes below 3000ft and at high CHT. (refer to Rotax SL-912-016)

- 3. Flaps
- 4. Trim
- 5. **Engine instruments**

CRUISE position AS REQUIRED CHECK

CAUTION

In flights above pressure altitudes of 6000 ft, the fuel pressure warning light must be monitored. If the fuel pressure warning light goes on, the electrical fuel pump must be switched ON to prevent fuel vapor formation in the fuel system.

4.5.9 Descent

- 1. Throttle
- Propeller control lever 2.
- 3. Carburetor heat

SET first AS REQUIRED SET second > 2000 RPM **AS REQUIRED**

CAUTION

For a rapid descent proceed as follows:

Throttle Propeller control lever Carburetor heat Flaps Airspeed Oil/cylinder head temperature SET first IDLE SET second 2260 RPM ON **CRUISE** position 130 KIAS CHECK

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 17



4.5.10 Landing

- 1. Seat belts and harnesses
- 2. Electrical fuel pump
- 3. Carburetor heat
- 4. Throttle
- 5 Airspeed
- 6. Flaps
- 7. Trim
- 8. Flaps
- 9. Approach speed
- 10. Propeller control lever
- 11. Landing light

CHECK if TIGHT ON ON AS REQUIRED 90 KIAS TAKE-OFF or LANDING position AS REQUIRED LANDING position 60 KIAS HIGH-RPM position ON (as required)

CAUTION

The approach speed has to be adapted to the actual environmental conditions. With strong head or crosswinds, in turbulent air or in wind shear, it may be desirable to approach at higher than normal speeds.

4.5.11 Balked Landing

- 1. Propeller control lever
- 2. Throttle
- 3. Carburetor heat
- 4. Flaps
- 5 Airspeed

SET first HIGH-RPM position SET second OPEN OFF TAKE-OFF position 65 KIAS

CAUTION

Any operation with throttle full open and activated carburetor heat should be avoided to prevent engine damage.

4.5.12 After Landing

- 1. Throttle
- 2. Flaps
- 3. Carburetor heat
- 4. Electrical fuel pump
- 5. Transponder
- 6. Landing light

IDLE CRUISE position OFF OFF OFF

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 18



4.5.13 Engine Shut-down

- 2. Parking brake
- 3. Flaps
- 4. ELT
- 5. AVIONICS switch
- 6. Ignition switch
- 7. Electrical equipment
- 8. Instrument light
- 9. BAT switch
- 10. Brake chocks and tie-downs

IDLE SET LANDING position CHECK on frequency 121.5 MHz OFF OFF OFF OFF OFF AS REQUIRED

4.5.14 Flight in Heavy Rain and/or with Very Dirty Wings

CAUTION

Wet and/or very dirty wings and control surfaces may impair flight performance. This applies in particular to take-off distance, climb performance and maximum cruising speed.

An increase in stall speeds of up to 3.0 kts may occur. A wet or dirty pitot-static-tube may lead to false airspeed and/or altitude indications.

Visibility may deteriorate considerably due to rain.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 19

AQUILA Aviation	AIRPLANE FLIGHT MANUAL AQUILA AT01	Section 4 NORMAL PROCEDURES
-----------------	---------------------------------------	--------------------------------

[Intentionally left blank]

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	4 - 20



SECTION 5

PERFORMANCE

		Page
5.1	INTRODUCTION	5-2
5.2	PERFORMANCE CHARTS	5-3
5.2.1	Airspeed Calibration	5-3
5.2.2	Stalling Speeds	5-4
5.2.3	Wind Components / Crosswind Component	5-5
5.2.4	Flight Planning	5-6
5.2.5	Take-off Distance	5-7
5.2.6	Climb Performance / Cruise Altitude	5-8
5.2.7	Climb: Fuel Consumption, Time and Distance	5-9
5.2.8	Cruise Power Settings	5-10
	Intentionally left blank	5-11
5.2.9	Cruise Performance (TAS – True Airspeed)	5-12
5.2.10	Maximum Endurance	5-13
5.2.11	Maximum Range	5-14
5.2.12	Climb Performance after Balked Landing	5-15
5.2.13	Landing Distance	5-16
5.2.14	Descent: Fuel Consumption, Time and Distance	5-17
5.2.15	Flight Planning Example	5-18
5.2.16	Noise Characteristics	5-23

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 1



5.1 INTRODUCTION

The performance data in the following charts give an overview on the performance and capabilities of the AQUILA AT01. The information given herein provides a basis for flight planning prior to every flight.

All data in the charts haves been acquired during flight testing conducted with an aircraft and engine in a good operating condition and then corrected to ISA conditions (15°C and 1013.25 hPa at sea level).

The data presented are achieved with a well-maintained aircraft and with average piloting techniques, under the condition that all procedures specified in this manual are followed precisely.

The specified fuel flow data for cruise are based on the recommended RPM/manifold pressure setting for each altitude. However, fuel flow and the resulting endurance with and without reserve are strongly dependent on engine condition, surface quality of the aircraft (clean, dry and no dirt residues) and meteorological conditions.

For precise flight planning and in order to estimate the amount of fuel required for a particular flight, all available information should be used and all influencing factors considered.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 2




5.2 PERFORMANCE CHARTS

5.2.1 Airspeed Calibration

Airspeed calibration accounts for the position error of the pitot-static pressure system, but not for the instrument error.

Assumption: zero instrument error

Example: 120 KIAS (indicated airspeed) corresponds to 118 KCAS (calibrated airspeed)

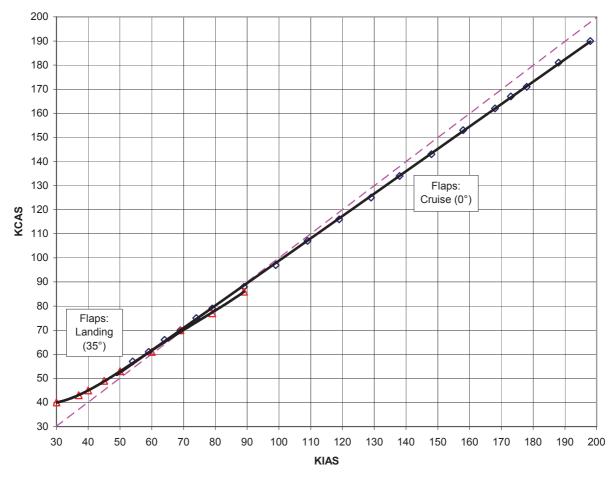

AQUILA AT01 Airspeed Calibration

Fig.: 5.2.1 Airspeed Calibration

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 3



5.2.2 Stalling Speeds

Airplane flight configuration in which the stalling speeds were determined:

- Center of gravity (CG) position:
- Take-off mass:

31% MAC 750 kg

- Idle

Flap Position	Vs	Vs	selected markings
Position	[KCAS]	[KIAS]	[KIAS]
Cruise	52	49	52 (Lower limit green arc)
Take-off	48	45	
Landing	43	39	44 (Lower limit white arc)

Tab.: 5.2.2 Stalling Speeds in Straight-and-Level Flight


Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 4



Section 5 PERFORMANCE

5.2.3 Wind Components / Crosswind Component

Maximum demonstrated crosswind component: 27 km/h, 15 knots

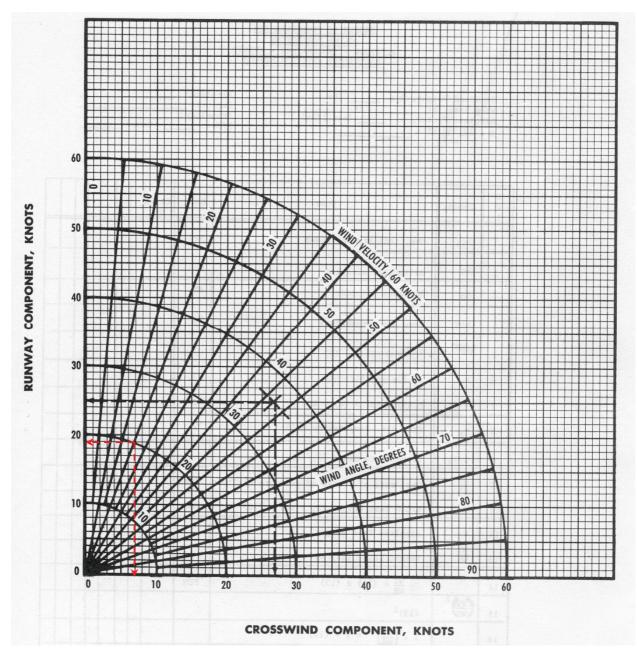

Example:

Reported wind: $250^{\circ}/20 \text{ kts}$ RWY direction: $270^{\circ} (RWY 27) \rightarrow$ differential angle RWY wind = 20° \Rightarrow Head wind component:19 kts; crosswind component:7 kts from the left

Document No.:	Issue:	supersedes Issue:	ersedes Issue: Date:	
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 5



5.2.4 Flight Planning

The performance tables and diagrams on the following pages contain all information necessary for flight planning, starting with take-off planning at the departure airfield up to the point of determination of the estimated landing distance at the destination airfield.

Experience shows that there is a good match between the data determined during flight planning and data from the actual flight. However, the basic pre-requisite for good data correlation is thorough planning in combination with a well-maintained aircraft and an engine in a good operating condition as well as a sufficiently experienced pilot.

For flight planning, it is recommended to determine always the values so as to be on the safe side when reading out data or rounding values. Differences between the actual performance data of the aircraft "at hand" and the data specified in this manual, acquired with the test aircraft in a defined operating condition, and other influences such as unexpected turbulences can thus arise. These factors may cause differences in range and endurance of up to 10%.

NOTE

Insects or other dirt on the propeller, the leading edge of the wing and other aerodynamically sensible areas can significantly reduce the performance and handling qualities of the aircraft.

The influence of altitude and ambient air temperature are determined as follows:

- 1. Set the reference pressure on the altimeter to 1013 hPa to determine actual pressure altitude.
- 2. Using the corresponding diagrams and the ambient air temperature, the influence of density altitude can be accounted for.

CAUTION

After determining pressure altitude, reset the altimeter setting to the local QNH before starting the planned flight. On the ground, this altimeter setting should indicate the elevation of the airfield.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 6



5.2.5 Take-off Distance

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite7.XLS

Document No.:	Issue: supersedes Issue:		Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 7



5.2.6 Climb Performance / Cruise Altitude

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite8.XLS

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 8

5.2.7 Climb: Fuel Consumption, Time and Distance

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite9_17.XLS

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 9



<u>empty page</u> please do not file them

Document No.:	lssue:	Issue: supersedes Issue:		Page:	
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 9	



Section 5 PERFORMANCE

5.2.8 Cruise Power Settings

Press.	Temp.		Cruise power - % of the maximum continuous power (MCP)													
Alt	(ISA)		55%			65%			75%			85%			MCP	
	Т	RPM	MP	F/F	RPM	MP	F/F	RPM	MP	F/F	RPM	MP	F/F	RPM	MP	F/F
[ft]	[°C]	[1/min]	[in Hg]	[l/h]	[1/min]	[in Hg]	[l/h]	[1/min]	[in Hg]	[l/h]	[1/min]	[in Hg]	[l/h]	[1/min]	[in Hg]	[l/h]
0	15	1900	24.6	14	2000	25.7	15.6	2100	27.0	21.0	2260	27.7	24	2260	28	26
2,000	11	1900	24.0	15	2000	24.7	16.0	2200	25.7	21.3	2260	26.7	22	2260	27	26
4,000	7	1900	23.3	16	2100	23.3	16.8	2260	24.3	21.5	2260	25.2	22			
6,000	3	2000	22.0	17	2200	22.7	19.3	2260	23.3	22.3						
8,000	-1	2100	21.0	18	2200	21.5	21.5	2260	21.5	23.0						
10,000	-5	2200	19.7	19	2260	20.1	22.0									
12,000	-9	2260	18.5	19												

MCP Maximum continuous power

RPM: Revolutions per minute

MP: Manifold pressure

F/F: Fuel flow

Data correction for non-ISA temperature conditions:

For each 10°C above ISA: increase manifold pressure by 3%, fuel consumption will increase by 5% For each 10°C below ISA: decrease manifold pressure by 3%, fuel consumption will decrease by 5%

Example:	
Flight altitude:	2000 ft
ISA temperature:	11°C
Temperature in flight altitude:	21°C (ISA + 10°C)
Power setting:	65%
RPM:	2000 1/min
Manifold pressure for ISA (see chart):	24.7 in Hg
Manifold pressure calculated for ISA + 10°C:	24.7+ (0.247x 3.0) =25.44 in Hg
Fuel consumption for ISA:	16 l/h
Fuel consumption calculated for ISA + 10°C:	16 + (0.16 x 5.0) = 16.8 l/h

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 10



[Intentionally left blank]

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 11

5.2.9 Cruise Performance (TAS – True Airspeed)

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite12.XLS

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 12



5.2.10 Maximum Endurance

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite13_14.XLS

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 13



5.2.11 Maximum Range

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite13_14.XLS

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 14



5.2.12 Climb Performance after Balked Landing

Page replaced by FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite15.XLS

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 15



5.2.13 Landing Distance

Page replaced by: FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite16.XLS

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 16

5.2.14 Descent: Fuel Consumption, Time and Distance

Page replaced by: FM-AT01-1010-100_E_Kap_5_Rev_A11_Seite9_17.XLS

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 17



5.2.15 Flight Planning Example

The following contains a flight-planning example for the AQUILA AT01 to demonstrate the application and handling of the tables, charts and data presented in this section of the flight manual. The planning of the flight was based upon the following conditions:

Aircraft

Take-off mass:	720 kg
Usable fuel:	109.6 liters
Wheel fairings installed	

Conditions at the departure airfield

Pressure altitude:	. 1800 ft
Temperature:	. 18°C (ca. 7°C above ISA)
RWY direction:	. 24 (240°)
Wind conditions	. 280°/10 kts
RWY length (paved, level and dry RWY)	. 620 m

Cruise conditions

Overall flight distance to destination	480 NM (888 km)
Cruise altitude (altimeter setting 1013 hPa)	4500 ft
Temperature at cruise alt	10°C (4°C above ISA)
Reported wind en-route	10 kts tailwind component

Conditions at the destination airfield

Pressure altitude	. 380 ft
Temperature	. 20°C (6°C above ISA)
RWY direction	. 27 (270°)
Wind conditions	. 220°/15 kts
RWY length (dry and level grass RWY)	. 780 m

TAKE-OFF RUN AND DISTANCE

Before using chart 5.2.5 on page 5-7 to determine the required take-off run and take-off distance, the headwind and crosswind component of the wind relative to runway direction has to be obtained from chart 5.2.3 on page 5-5.

Relative to runway direction, the wind comes from an angle of 40° from the right at 10 kts. Using these values and chart 5.2.3, we obtain a headwind component of 8 kts and a crosswind component of 7 kts. The crosswind component is within the approved range of 15 kts.

We now have all the necessary data to determine the required take-off distances from chart 5.2.5 and we obtain the following values for our example:

Take-off run required (ground roll):	218 m
Lift-off speed:	
Take-off distance required (incl. initial climb to a height of 50 ft)	
Airspeed at 50 ft height	57 KIAS

The required take-off distance is less than the available runway length (TODA) of 620m.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 18



CLIMB

The climb performance, i.e. the achievable climb rate and the best rate-of-climb speed, can be obtained from chart 5.2.6 on page 5-8. To use these charts we required the following parameters: take-off mass, pressure altitude and outside air temperature.

Time needed and distance covered as well as fuel consumption for the climb segment may be calculated using chart 5.2.7 on page 5-9.

In our example, take-off occurs at an altitude of 1800 ft. This means that we have to calculate the values for cruise altitude and for the altitude where climb is initiated using chart 5.2.7. The values obtained for the initial climb altitude have to be subtracted from the values obtained for the cruise altitude.

Since outside air temperature is 7°C above ISA, the values determined from chart 5.2.7 must be increased by 10%. For our example, we obtain the following:

Climbing time:.....(7.7 - 2.9) · 1.1 = 5.3 min = 5'20" Climbing distance:.....(8.7 NM - 3.2 NM) · 1.1 = 6 NM Fuel needed:....(4.1 liters - 1.5 liters) · 1.1 = 2.7 liters

The reported tailwind component of 10 kts for the cruise altitude also has an effect on the climb segment and climbing distance. It has no influence on climbing time and fuel consumption.

Wind speed and profile usually change with altitude. In our example, we assume a constant tailwind component for the climb segment of 7 kts.

During the climb segment, the tailwind acts on the aircraft for 5.3 minutes. As a result, we obtain for the covered distance on the ground during the climb segment:

 $6\,\text{NM} + \frac{7\,\text{kts}\cdot 5.3\,\text{min}}{60\,\text{min/h}} = 6.62\,\text{NM}$

The result shows that the wind only has a marginal influence on climbing distance and is only of importance in the case of large head/tailwind components or climbs of long duration (i.e. with large altitude differences). In the present planning example, wind influence on climbing distance could have been neglected.

DESCENT

The procedure for determining performance data for the descent flight segment is analogous to the climb segment. Chart 5.2.14 on page 5-17 is used to calculate time, distance and fuel consumption for the descent segment. In our flight-planning example, descent is initiated at cruise altitude (4500 ft) and ends at 380 ft. Again, we have to subtract the values of the descent endpoint from the values of the descent starting point. During descent, the altimeter setting must be changed to the local QNH.

Descent duration:	6 min - 0.5 min = 5.5 min = 6'0"- 0'30" = 5' 30"
Descent distance:	12.75 NM – 1.0 NM = 11.75 NM
Fuel needed:	0.8 liters – 0.1 liters = 0.7 liters

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 19



A correction for tailwind influence and temperature difference with respect to ISA conditions has not been included in our planning example as, in our case, the influence is negligible.

CRUISE

The choice of cruise altitude is usually a compromise considering flight distance, aircraft performance, topography, airspace structure, en-route weather conditions and other influencing factors. In the present flight-planning example, a typical cruise altitude and en-route wind condition has been chosen.

The range diagram in chart 5.2.11 on page 5-14 shows the relationship between engine power setting and maximum achievable range as a function of pressure altitude and outside air temperature. Lower power settings result in considerable fuel savings and thus higher achievable ranges.

Applying chart 5.2.11 to our example, a chosen power setting of 75 % and a cruise altitude of 4500 ft yields a maximum range of 537 NM at a true airspeed of 120 kts. The cruise speed in true airspeed has been obtained from chart 5.2.9 on page 5-12 taking into account the atmospheric conditions (outside air temperature and chosen pressure altitude for cruise) and the chosen power setting.

The maximum possible flight endurance is obtained by using chart 5.2.10 on page 5-13. For our planning example, the chart yields a maximum endurance of 4.55 hours at a power setting of 75 %. The determined maximum endurance and range contains a 30 minutes holding reserve, engine start-up and taxiing as well as take-off, climb, cruise, descent and landing.

Taking the reported tailwind of 10 kts in 4500 ft into consideration, maximum achievable range must be corrected as follows:

Range with no wind	537,0 NM
Range increment due to 10 kts	
tailwind (4,55 h x 10 kts)	45,5 NM

<u>582,5 NM</u>

From this, it follows that the planned flight over a distance of 480 NM with a cruise power setting of 75 % does not conflict with aircraft performance and is feasible as a non-stop flight without an additional fuel stop.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 20



CALCULATION OF AMOUNT OF FUEL REQUIRED

Fuel required for engine start-up and tax	kiing 2.0 liters	(see remark "Fuel Quantity" on chart 5.2.10 and 5.2.11)
Required fuel for climb (page 5-9)	+ 2.7 liters 4.7 liters	
Climb distance (page 5-9) Wind correction (tailwind)	6.0 NM + 0.6 NM <u>6.6 NM</u>	

During the descent from 4500 ft to 380 ft, a distance of 11.75 NM is covered and 0.7 liters of fuel consumed (chart 5.2.14). The influence of the wind has been neglected.

Overall flight distance	480.0 NM
Climb distance	-6.6 NM
Descent distance	- 11.75 NM
Cruise section:	<u>461.75 NM</u>

For the calculation of the time required to cover the cruising distance of 461.75 NM (cruise time), we need the estimated ground speed of the aircraft. With an expected tailwind of 10 kts at cruise altitude, we obtain an (estimated) ground speed of:

120 kts + 10 kts = 130 kts

For the cruise time, we obtain:

 $\frac{461.7\,\text{NM}}{130\,\text{kts}} = 3.55\,\text{h} = 3\,\text{h}\,33^\circ$

The amount of fuel required for the cruise segment is:

3.55 h x 21.9 l/h = 77.7 liters

A fuel flow of 21.9 l/h is calculated from table 5.2.8 on page 5-10 in the section for the power setting of 75 % MCP as follows:

With a temperature of 10°C in 4500 ft, we obtain a density altitude of 5000 ft from chart 5.2.9, 5.2.10 or 5.2.11, respectively. The density altitude is the entry parameter in table 5.2.8 and we have to interpolate between the given values for 4000 and 6000 ft for our determined density altitude of 5000 ft. Using density altitude and not pressure altitude, we have already accounted for the deviation of actual outside air temperature from ISA conditions. An additional correction for temperature difference with respect to ISA in accordance with the correction information in table 5.2.8, which is more or less a correction for the difference between pressure and density altitude, is not necessary.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 21



The total amount of fuel required is calculated as follows:

Engine start-up, taxiing and climb	4.7 liters	
Cruise	77.7 liters	
Descent	0.7 liters	
Total amount of fuel required	<u>83.1 liters</u>	

If we assume full tanks at take-off, the following reserve remains:

Amount of usable fuel	109.6 liters
Total amount of fuel required	- 83.1 liters
Fuel reserve:	<u>26.5 liters</u>

The actual ground speed of the aircraft must be regularly checked and tracked during flight as it is the basis for checking flight time, fuel consumption and amount of fuel left. If, for example, the expected tailwind of 10 kts does not materialize, the power setting must be reduced to 65 % MCP to achieve the same range with the amount of fuel determined for the cruise leg with tailwind.

LANDING DISTANCE

Before using chart 5.2.13 on page 5-16 to determine required landing distance and required ground roll, the headwind and crosswind components of the wind relative to runway direction must be calculated from chart 5.2.3 on page 5-5.

Relative to runway direction, the wind comes at an angle of 50° from the left at 15 kts. Using these values in chart 5.2.3, we obtain a headwind component of 9 kts and a crosswind component of 12 kts. The latter is within the approved range of 15 kts.

Determination of landing mass:

Take-off mass Fuel consumption (83.1 l x 0.73 kg/l = 60.6 kg)	720 kg <u>- 60.6 kg</u> <u>659.4 kg</u>
Determination of required landing distance and ground roll:	
Landing distance required from a height of 50 ft	375 m
Increment for grass runway (dry: +15%)	432 m
Ground roll	160 m
Increment for grass runway (dry: +15%)	184 m

The available runway length of 780 m is sufficient for the estimated landing mass. The reported crosswind component remains below the maximum approved limit of 15 kts.

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 22



5.2.16 Noise Characteristics

a)	Noise level limit in dB(A) according to LSL, chapter X.: Certificated noise level		dB(A) dB(A)
	Difference to noise level limit:	7.7	dB(A)

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 23



Section 5 PERFORMANCE

5.2.5 Take-off Distance


Take-off mass [kg]	KIAS KIAS	
	Lift-off	at 50 ft
750	50	57
600	50	55


Conditions:

Power sSetting:	Full power
RPM:	2260 1/min
Flaps:	17° (T/O position)
Payed level and d	

NOTES:

- For operation on a dry, grass runway, increase the required take-off distances by 25%, on a soft, grass runway by up to 40%.
- Add appropriate values for wet grass/ground, ice, snow and slush.
- In high humidity conditions, the take-off distances may increase by up to 10%.
- A not properly maintained aircraft, deviations from defined procedures, bad meteorological, ambient and runway conditions (rain, crosswind, wind shear, etc.) may considerably increase the required take-off distances.

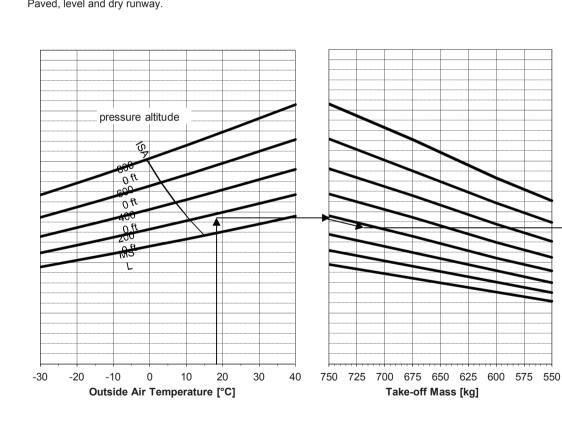

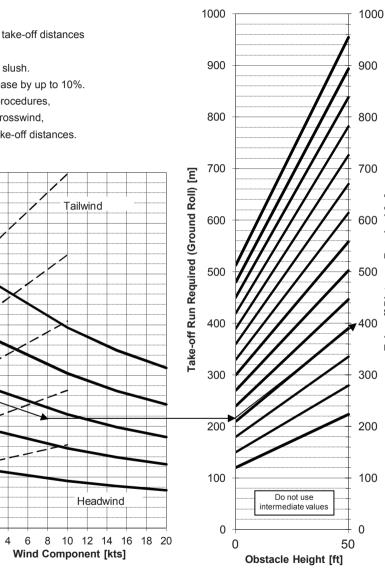

Example:	Pressure altitude: 1800 f
	Outside air temperature: 18°C

Take-off mass: 720 kg

Headwind component: 8 kt: Take-off run required (ground roll): 218 n

Take-off distance required: 400 n

Take-off Distance Required [m]

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 7

0 2




5.2.6 Climb Performance / Cruise Altitude

Take-off mass [kg]		Best rate	e-of-climb spee	d [KIAS]
		MSL	6 000 ft	12 000 ft
750	13 000 ft	65	63	61
600	16 000 ft	62	61	60

-30

Conditions:	
Throttle:	Full open
RPM:	2260 1/min
Flaps:	Cruise (0°)

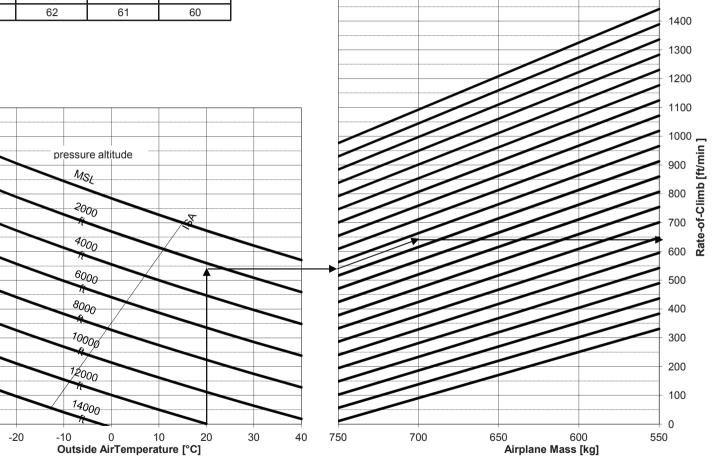


Example: Pressure altitude: 2100 ft

Airplane mass: 700 kg

Rate-of-climb: 640 ft/min

 
1500



Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 8



5.2.7 Climb: Fuel Consumption, Time and Distance

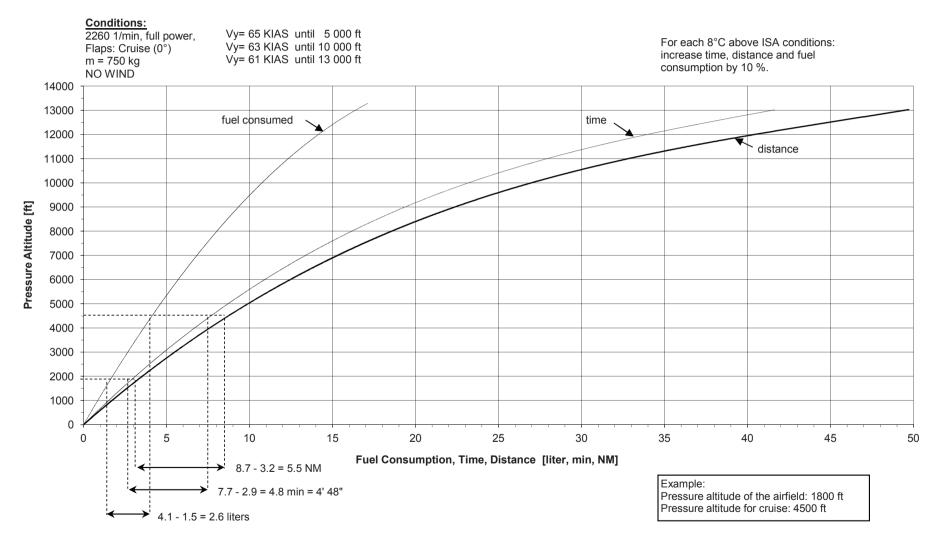


Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 9



5.2.9 Cruise Performance (TAS – True Airspeed)

Conditions: Power setting: refer to table 5.2.8 on page 5-10. Airplane mass: 750 kg Flaps: Cruise position (0°) **NOTE:** Without wheel fairings, reduce the determined speeds by approximately 5 %.

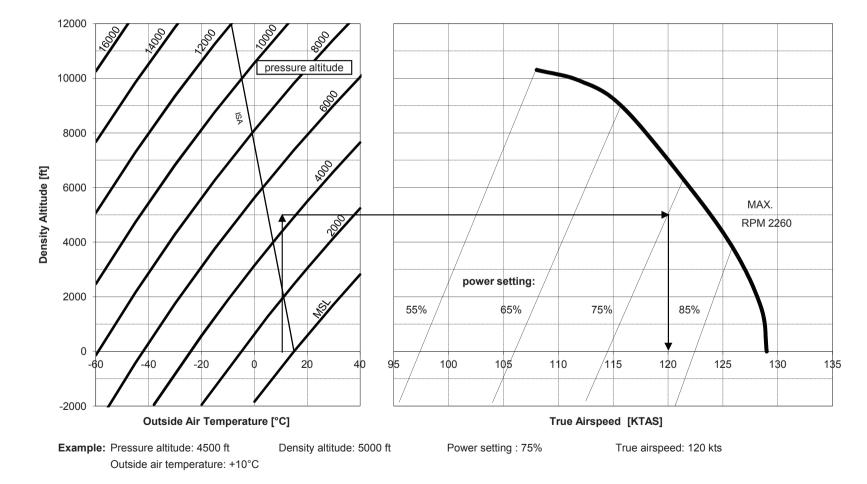

 Document No.:
 Issue:
 supersedes Issue:
 Date:
 Page:

 FM-AT01-1010-100E
 B.01
 A.12 (17/09/2008)
 12/07/2012
 5 - 12



5.2.10 Maximum Endurance

Condition:

Power setting: according table 5.2.8 on page 5-10 Airplane mass: 750 kg Flaps: Cruise position (0°)


NOTE:

A not properly maintained engine and aircraft may considerably reduce the endurance of the airplane.

Fuel quantities: usable fuel 109.6 liters

The calculation of the endurance includes:

- 1. Fuel for engine start-up and taxiing: 2 liters
- 2. Fuel for take-off and cimb to cruise altitude with max. continuous power as well as fuel for the descent
- 3. Reserve for 30 min. holding procedure at 55% = 7.5 liters

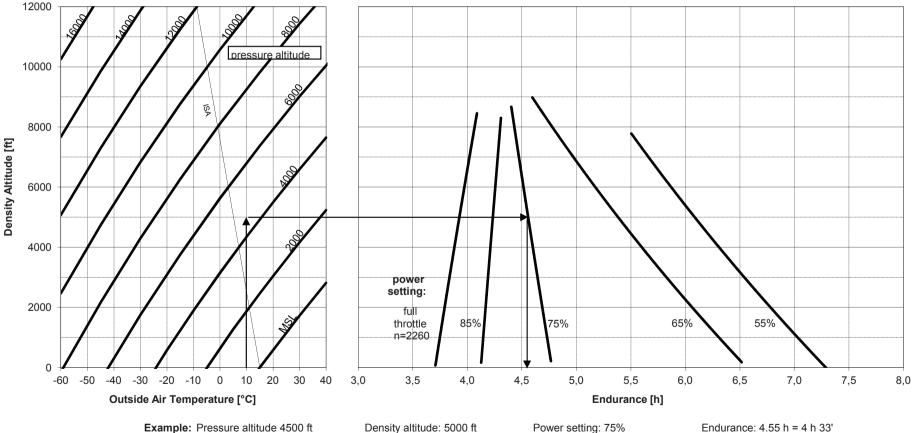

Example: Pressure altitude 4500 ft

Power setting: 75%

Endurance: 4.55 h = 4 h 33'

Outside air temperature +10°C

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 13



5.2.11 Maximum Range

Conditions:

Power setting: according table 5.2.8 on page 5-10 Airplane mass: 750 kg Flaps: Cruise position (0°)


NOTE:

A not properly maintained engine and aircraft may considerably reduce the range of the airplane.

Fuel quantities: usable fuel: 109.6 liters

The calculation of the range includes:

- 1. Fuel for engine start-up and taxiing: 2liters
- 2. Fuel for take-off and climb to cruise altitude with max. continuous power as well as fuel for the descent
- 3. Reserve for 30 min. holding procedure at 55% = 7.5 liters

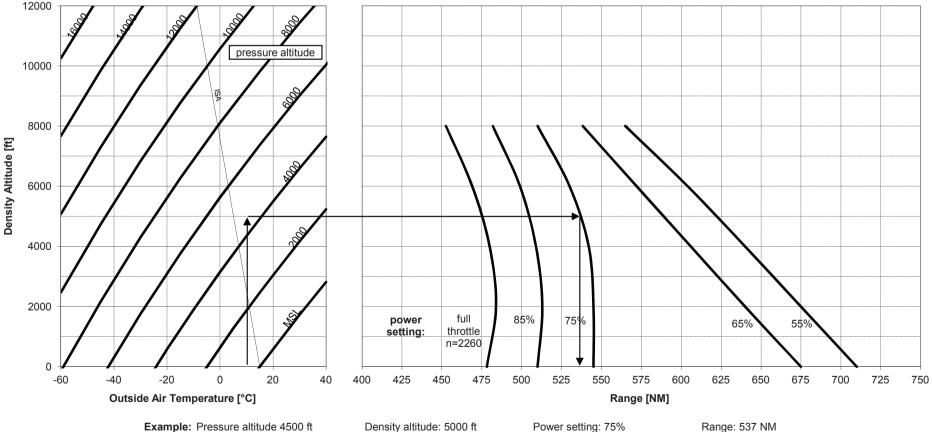

Outside air temperature +10°C


Power setting: 75%

Range: 537 NM

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 14



5.2.12 Climb Performance after Balked Landing

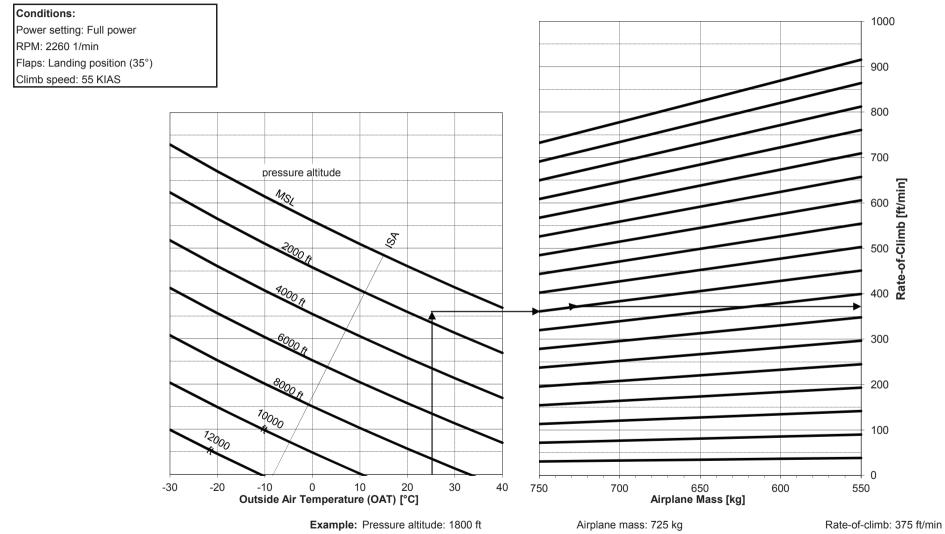

Outside air temperature: +25°C

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 15



1000

5 - 16

1000

12/07/2012

AQUILA AT01

5.2.13 Landing Distance

Landing mass [kg]	KIAS	KIAS	
	at 50 ft	Touchdown	
750	65	45	
600	65	43	

NOTES: - For landing on a dry, grass runway, increase the required landing distances by 15%.

- Add appropriate values for wet grass/ground, ice, snow and slush.

- A not properly maintained aircraft, deviations from defined procedures, bad meteorological and runway conditions (rain, crosswind, windshear,
- etc.) may considerably increase the landing distances.



Power setting: Idle


Propeller: Low pitch (propeller control lever: HIGH-RPM position) Flaps: Landing position (35°)

Maximum brake application.

Paved, level and dry runway.

FM-AT01-1010-100E


B.01

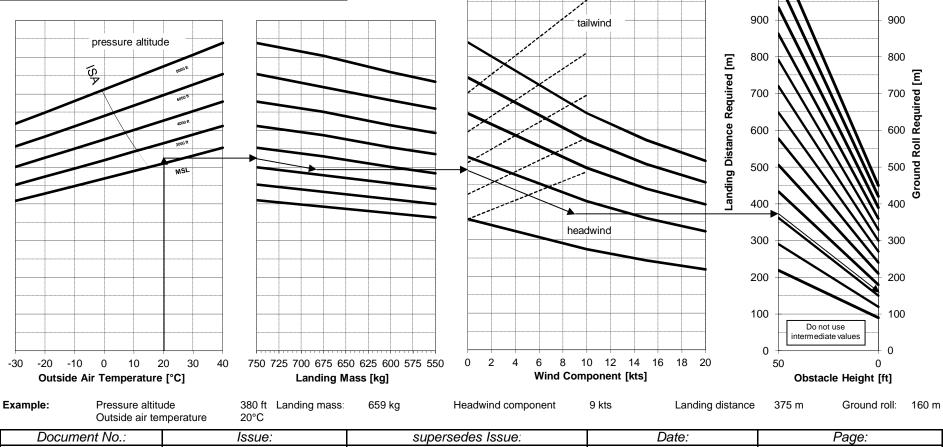

A.12 (17/09/2008)



5.2.14 Descent: Fuel Consumption, Time and Distance

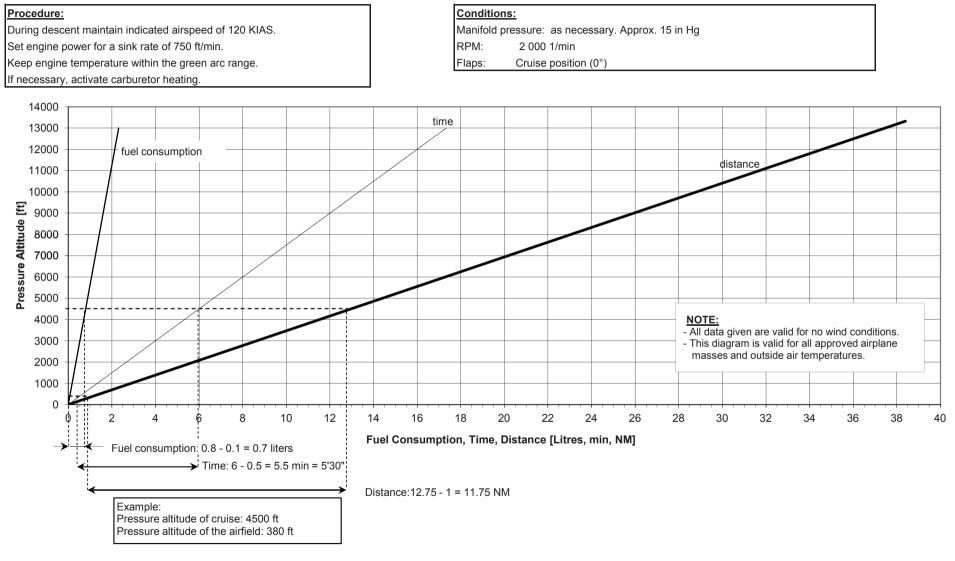

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	5 - 17



SECTION 6

WEIGHT AND BALANCE / EQUIPMENT LIST

		Page
6.1	INTRODUCTION	6-2
6.2	AIRCRAFT WEIGHING PROCEDURE	6-3
6.2.1	Aircraft Weighing Report	6-5
6.3	WEIGHT AND BALANCE DATA AND RECORD	6-6
6.3.1	Weight and Balance Record	6-6
6.4	WEIGHT AND BALANCE DETERMINATION FOR FLIGHT	6-7
6.4.1	Moment Determination	6-8
6.4.2	Weight and Moment Determination	6-9
6.4.3	Approved Center of Gravity Range and Mass Moment Limits	6-10
6.5	EQUIPMENT LIST	6-11
6.5.1	Effective Equipment List of the Aircraft	6-12

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 1

AQUILA Aviation

6.1 INTRODUCTION

The aircraft must be flown with a mass and center of gravity position (C.G.) that are within the approved operating ranges defined in this section to guarantee safe operation, the specified flight performances and the proven flight characteristics. It is the responsibility of the pilot to ensure that the aircraft is properly loaded. The shift in C.G. location due to fuel consumption during flight has always to be taken into consideration.

This section describes the weighing procedure for the aircraft and the procedure for determining empty mass, mass moment of the aircraft and C.G. position.

Before delivery, the manufacturer determines the basic empty mass and mass moment as well as the C.G. location for each aircraft, all of which have been determined during the conformity inspection process by weighing the airplane. These data are documented in the Aircraft Weighing Report (see paragraph 6.2.1) and in the Weight and Balance Record in paragraph 6.3.1 of this section.

Aircraft weighings must be conducted at regular intervals as well as on special occasions in accordance with the applicable national operational and legal requirements.

Whenever new equipment or retrofits are installed into the aircraft, the resulting new basic empty mass, mass moment and C.G. location have to be determined and documented in the Weight and Balance Record of paragraph 6.3.1.

The following pages provide forms and means that are recommended to be used for the weighing the aircraft and determining the required mass and balance data, such as the Aircraft Weighing Report (paragraph 6.2.1), the Weight and Balance Record (paragraph 6.3.1), and the Weight and Moment Determination Table (paragraph 6.4.2).

NOTE

If any modifications or repairs are carried out on the aircraft, the new basic empty mass, mass moment and C.G. location will have to be determined in accordance with the respective national aviation regulations.

An authorized person (certifying staff) has to certify the new basic empty mass and mass moment as well as C.G. position and the maximum usable load in the Weight and Balance Record.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 2



Section 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

6.2 AIRCRAFT WEIGHING PROCEDURE

Before conducting a weighing, the aircraft and its equipment must explicitly meet the weighing configuration specified below, i.e. the aircraft has to be weighed in an airworthy condition.

Weighing configuration:

a) Aircraft with:

brake fluid engine oil (3 liters) coolant (2.5 liters) unusable fuel (10.4 liters)

b) Equipment in accordance with effective equipment list (para. 6.5).

Empty mass and the associated empty mass C.G. position should be calculated as follows:

Prepare the aircraft to meet the above-specified weighing configuration. Place scales or sensor supports under each wheel and longitudinally level out the aircraft in accordance with the sketch and description provided on the Aircraft Weighing Report in paragraph 6.2.1. In addition, make sure that the aircraft is also laterally approximately leveled out. When the aircraft is leveled out, drop the perpendicular with a plummet from the right wing leading edge at the fuselage-wing intersection and mark the point on the ground. Repeat this on the left side of the fuselage and then draw a line between the two points. Measure the distances D_L , D_R , and D_N from this reference line (refer also to the sketch on the Aircraft Weighing Report in paragraph 6.2.1).

The basic empty mass, empty mass moment and empty mass C.G. position may then be determined using the following equations:

Empty mass m_{empty} [kg]:

 $m_{empty} = m_L + m_R + m_N$

Empty mass moment MO_{empty} [kgm]:

 $MO_{empty} = m_L \cdot D_L + m_R \cdot D_R + m_N \cdot D_N$

Empty mass C.G. position D_{CG} [m]:

 $D_{CG} = \frac{MO_{empty}}{m_{empty}}$

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 3





Sign Convention:

The lever arms of the main landing gear wheels D_L and D_R have a positive (+) sign whereas that of the nose gear wheel D_N has a negative (-) sign.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 4



Section 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

6.2.1 Aircraft Weighing Report


Model:	<u>AT01</u>	Serial No:		Registration No:
Data in	accordance with A	<u>AFM</u>	Occasion for weig	hing:

Data in accordance with AFM Reference datum: Horizontal reference line:

Leading edge of wing root rib. Place a wedge (5.5°) on fuselage tube as shown in the sketch below and level out the a/c in its longitudinal axis using a spirit level. Including brake fluid, engine oil, coolant and unusable fuel (10.4 liters).

Weighing configuration:

Effective equipment list - dated:

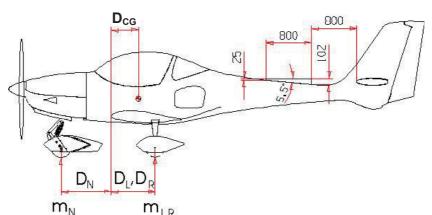

Position	Gross [kg]	Tare [kg]	Net Mass [kg]	Lever Arm [m]		
Nose wheel			m _N =	D _N = -		
Left main wheel			m _L =	D _L = +		
Right main wheel			m _R =	D _R = +		
Empty Mass $m_{empty} = m_N + m_L + m_R =$ [kg]						

Empty mass moment: $MO_{empty} = m_N \cdot D_N + m_L \cdot D_L + m_R \cdot D_R =$ _____[kgm]

Empty mass C.G. position: = Empty mass moment / Empty mass =

 $D_{CG} = MO_{empty} / m_{empty} =$

_ [m]

ee empty empty =	
+ MTOW [kg]	+
- empty mass [kg]	-
= max. usable load	=
	- empty mass [kg]

Data for airplane flight manual Para. 6.3.

Empty Mass [kg]	Empty M	Empty Mass Moment [kgm]			
Location / Date	Stamp	·	Signature		
Document No.:	Issue:	supersedes Issue:	Date:	Page:	
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 5	



6.3 WEIGHT AND BALANCE DATA AND RECORD

The current aircraft basic empty mass and a complete history of previous modifications are provided in the Weight and Balance Record.

Any change to the empty mass and/or empty mass C.G. position due to repairs, modifications or changes in equipment must be documented in the Weight and Balance Record.

The new empty mass and the associated C.G. position can be calculated if the changed masses and their lever arms are known (change of equipment), or, if these data are unknown, determined by weighing the aircraft (e.g. after repair).

If the empty mass and the associated C.G. position are calculated, ensure that the current effective data are used.

6.3.1 Weight and Balance Record

The table "Weight and Balance Record" depicted below shows the history of changes to the empty mass and the associated C.G. location due to structural repairs, modifications/retrofits and changes in equipment. The first entry for the aircraft is made in line with the conformity inspection at the end of the manufacturing process.

	AQUILA		A/C re	egistratior	1:		Serial r	number: Page no.:			ge no.:
		T01	Mass, lever arm and moment of modification/change						ent and aircraft		
No.	Date	Description of modification or weighing	added or removed	or mass arm			moment of individ. mass	empty mass	C.G. location		moment
			"+" or "_"	"+" or _{"-"} [kg] [m]		[kgm]	[kg]	[r	n]	[kgm]	
1		as delivered				-					

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 6



6.4 WEIGHT AND BALANCE DETERMINATION FOR FLIGHT

In order to operate the aircraft within the approved mass and C.G. limits, the take-off mass and the associated C.G. position must be determined, dependent upon loading for the planned flight.

Use the tables and charts provided on the following pages to determine mass and C.G. position:


Paragraph 6.4.1	moment determination (loading graph)
Paragraph 6.4.2	weight and moment determination
Paragraph 6.4.3	approved center of gravity range and mass moment limits graph

The take-off mass and the corresponding C.G. location must be determined as follows:

- 1. Take the basic empty mass m_{empty} and the empty mass moment MO_{empty} from the current effective Aircraft Weighing Report or the Weight and Balance Record, respectively, and enter them into the respective fields in the *Weight and Moment Determination Table* (paragraph 6.4.2).
- 2. Determine the individual masses for fuel, pilot, passenger and baggage to be carried in the aircraft and enter these data into the respective fields in the *Weight and Moment Determination Table* (para. 6.4.2). Use the *Loading Graph* (6.4.1) to obtain the individual moments for fuel, baggage, pilot and passenger and enter their values into the respective fields in the *Weight and Moment Determination Table*.
- 3. Determine the take-off mass by adding the individual masses for fuel, pilot, passenger and baggage to the basic empty mass. Determine the take-off mass moment by adding the individual mass moments for fuel, pilot, passenger and baggage to the basic empty mass moment.
- 4. Obtain the take-off C.G. location from the "Approved C.G. Range and Mass Moment Limits" diagram in paragraph 6.4.3 using take-off mass and take-off mass moment. Verify that the C.G. location falls into the approved C.G. range. The C.G. location may alternatively be determined by dividing the take-off mass moment by the take-off mass. It has then to be verified that the calculated take-off C.G. position is within the approved C.G. range.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 7

6.4.1 Moment Determination

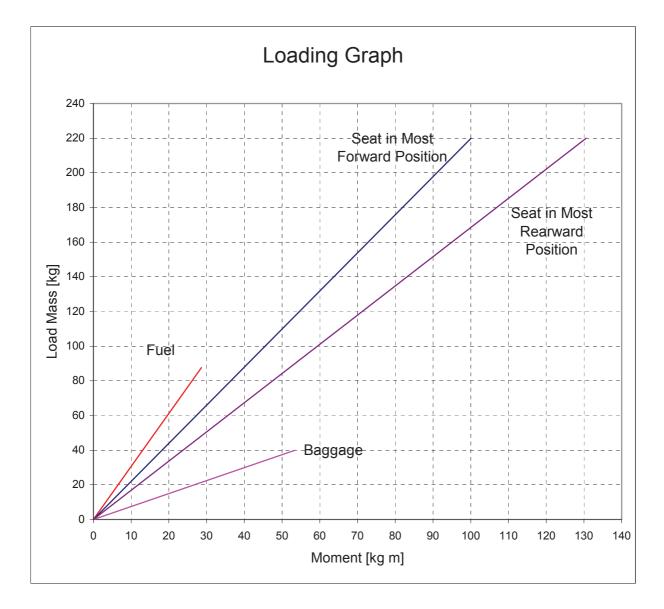

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 8




6.4.2 Weight and Moment Determination

Weight and Moment	AQUILA Exan		Registr	ation No.
Determination	Mass [kg]	Moment [kgm]	Mass [kg]	Moment [kg m]
1.) EMPTY MASS and MOMENT (take from the effective Aircraft Weighing Report or the Weight and Balance Record) including unusable fuel, engine oil, and coolant	490	210		
2.) PILOT + PASSENGER Lever Arm: 0.515 m	82	42.2		
3.) BAGGAGE Lever Arm: 1.3 m	20	26		
4.) A/C MASS and MOMENT WITHOUT FUEL (= sum of 1-3)	592	278.2		
5.) LOADED FUEL (loaded <u>USABLE</u> Fuel, Fuel Density: 0.72 kg/l) Lever Arm: 0.325 m	109.6 l x 0,72 = 78.9 kg	26		
6.) A/C MASS and MOMENT INCLUDING FUEL (= sum of 4-5)	670.9	304.2		
7.) Use the values in field 6 to determine the C.G. position in the diagram "Approved Center of Gravity Range and Mass Moment Limits" in paragraph 6.4.3.	The C.G. Pos is within the range. Refer example in t mentio	approved also to the he diagram		

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 9

Section 6 WEIGHT AND BALANCE/ EQUIPMENT LIST

6.4.3 Approved Center of Gravity Range and Mass Moment Limits

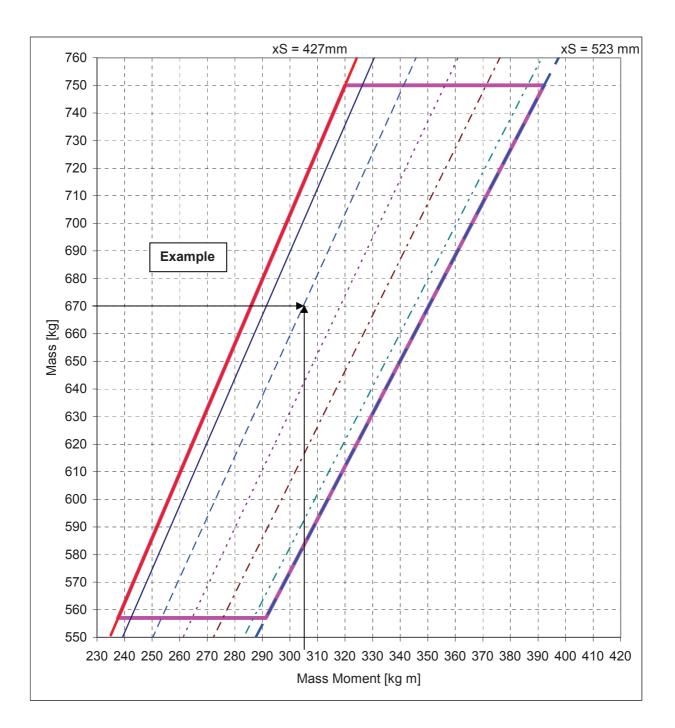

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 10



6.5 EQUIPMENT LIST

The equipment list on the following pages includes all instruments, avionic systems and other equipment installed in the present airplane. A list of all instruments, avionic systems and other equipment that are approved and available for installation in the AQUILA AT01 is to be found in the Maintenance Manual, document MM-AT01-1020-100.

All changes in or the retrofitting of equipment have to be documented in the equipment list in this handbook. It has to be kept up to date to reflect the actual current equipment status.

The equipment list in this handbook contains the following information:

- 1. Designation/description, manufacturer, model/P/N and S/N of the instrument, avionic system and other equipment
- 2. Indication of the installation location OR lever arm in [mm] from the reference datum. In this connection, it has to be pointed out that lever arms with a positive sign indicate locations behind the reference datum and lever arms with a negative sign indicate locations in front of the reference datum.



The installation of additional equipment or a change in installed equipment, respectively, must be carried out in accordance with the data provided in the Maintenance Manual, document MM-AT01-1020-100. The retrofitting of equipment has to be conducted in accordance with the applicable Service Bulletin (document code SB-AT01-...). In case of doubt, the type certificate holder or the production/maintenance organization of AQUILA Aviation should be contacted.

In line with every equipment change or retrofit, the basic empty mass, empty mass moment, empty mass C.G. location and the maximum usable load has to be re-determined and documented in the Aircraft Weighing Report as well as in the Weight and Balance Report in paragraph 6.3.1. This can be accomplished by calculation, if the individual masses and lever arms of the equipment are known, or by re-weighing the complete aircraft in accordance with paragraph 6.2. The new C.G. location must be within the approved C.G. range.

Document No.:	Issue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 11



6.5.1 Effective Equipment List of the Aircraft

Ту	pe: AQUILA AT01	Registration: -		Serial Number:	AT01-
*)	Designation / Description	Manufacturer	Model / P/N	S/N	Installation Location **)
	Battery				
	Ignition switch				
	Voltmeter				
	Ammeter				
	RPM-Indicator (tachometer)				
	Oil pressure indicator				
	Oil temperature indicator				
	CHT-Indicator				
	Manifold pressure indicator				
	Fuel pressure indicator				
	Fuel quantity indicator				
	Fuel flow meter				
	Engine hour meter				
	Airspeed indicator				
	Stall warning				
	Altimeter 1				
	Variometer				
	Compass				
	Cockpit watch				
	OAT indicator				
	Turn & bank indicator				
	Directional gyro (HSI)				
	Gyro horizon (ADI)				
	GPS / moving map				
	VHF COM/NAV 1				
	VOR/LOC indicator (CDI)				
	Intercom				
	Transponder				
	Altitude encoder				
	ELT				
	Seat belts LH				
	Seat belts RH				
<u> </u>	Fire extinguisher				
	Strobe light box				
					<u> </u>
<u> </u>					_
					1

*) Mark where applicable

**) describe installation location or enter lever arm from reference datum in [mm] (keep algebraic sign of lever arm in mind)

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 12



Type: AQUILA AT01		Registration: -		Serial Number: AT01-	
*)	Designation / Description	Manufacturer	Model / P/N	S/N	Installation Location **)
	<u> </u>				
	<u> </u>				
<u> </u>					
	<u> </u>				
	<u> </u>				
	<u> </u>				
	<u> </u>	1	[1	

*) Mark where applicable

**) describe installation location or enter lever arm from reference datum in [mm] (keep algebraic sign of lever arm in mind)

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 13



Type: AQUILA AT01		egistration: -		Serial Number:	AT01-
*) Designation / I	Description	Manufacturer	Model / P/N	S/N	Installation Location **)
					,
*) Mark where applic					

*) Mark where applicable

**) describe installation location or enter lever arm from reference datum in [mm] (keep algebraic sign of lever arm in mind)

Document No.:	lssue:	supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	6 - 14



SECTION 7

DESCRIPTION OF THE AIRCRAFT AND ITS SYSTEMS

		Page
7.1	INTRODUCTION	7-4
7.2	AIRFRAME	7-5
7.2.1	Fuselage	7-5
7.2.2	Wing	7-5
7.2.3	Empennage	7-6
7.3	FLIGHT CONTROLS	7-6
7.3.1	Aileron Control	7-6
7.3.2	Elevator Control and Trim System	7-7
7.3.3	Rudder Control	7-7
7.3.4	Flap Control and Flap Position Indication	7-8
7.3.5	Control Stick Lock	7-8
7.4	INSTRUMENT PANEL (Standard Equipment)	7-9
7.4.1	Flight Instruments	7-10
7.4.2	Switches and Other Controls	7-10
7.4.3	Cabin Heat	7-11
7.4.4	Cabin Ventilation	7-11
7.5	UNDERCARRIAGE	7-11
7.5.1	Nose Landing Gear and Nose Gear Steering	7-11
7.5.2	Main Landing Gear and Brake System	7-12
7.5.3	Parking Brake	7-12

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 1



7.6	SEATS, SEATBELTS AND HARNESSES	7-12
7.6.1	Seat Adjustment	7-13
7.7	BAGGAGE COMPARTMENT	7-13
7.8	CANOPY	7-14
7.9	POWER PLANT	7-15
7.9.1	Engine	7-16
7.9.2	Throttle and Choke	7-17
7.9.3	Propeller and Propeller Control	7-18
7.9.4	Carburetor Heat	7-18
7.10	FUEL SYSTEM	7-19
7.10.1	Fuel storage and Ventilation	7-21
7.10.2	Fuel Selector / Shut-Off Valve	7-21
7.10.3	Electrical Fuel Pump and Fuel Strainer	7-22
7.10.4	Fuel Level Indication	7-22
7.10.5	Fuel Tank Drainage System	7-23
7.11	ELECTRICAL SYSTEM	7-24
7.11.1	Power Supply and Battery System	7-24
7.11.2	Ignition System and Starter	7-25
7.11.3	Electrical Equipment and Circuit Breakers	7-27
7.11.4	Voltmeter and Ammeter	7-27
7.11.5	Alternator Warning Light	7-27
7.11.6	Fuel Pressure Warning Light	7-28
7.11.7	Engine Instruments and Fuel Level Indicator	7-28
7.11.8	External Power Unit	7-28

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 2



AIRPLANE FLIGHT MANUAL AQUILA AT01

Section 7 SYSTEM DESCRIPTION

7.12	PITOT-STATIC SYSTEM	7-29
7.13	STALL WARNING SYSTEM	7-30
7.14	AVIONICS	7-31
7.15	RESERVED (Intentionally left blank)	7-32

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 3



7.1 INTRODUCTION

Section 7 of the Airplane Flight Manual contains a general description of and operating instructions for the aircraft and its systems.

Refer to Section 9 for the description of and operating instructions for the optional equipment and systems.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 4



7.2 AIRFRAME

The majority of the aircraft structure is constructed in composite design. Glass fibre (GFRP) as well as carbon fibre materials (CFRP) are used that are bedded into an epoxy resin matrix. The aircraft structure consists of both, monolithic GFRP or CFRP shells / structural components and sandwich shells with a structural foam core based on PVC.

7.2.1 Fuselage

The fuselage forms one structural unit along with the vertical and horizontal stabilizers. The fuselage and vertical stabilizer as a monolithic component consists of two half-shells. While the fuselage portion of the half-shells is fabricated from solid fibreglass laminate, the vertical stabilizer portion has a sandwich structure. The GFRP-skin of the fuselage is reinforced by four carbon fibre stringers, arranged lengthwise along the entire fuselage.

Four ring frames and a baggage compartment bulkhead support and stiffen the fuselage shells in the tail boom section. In the forward fuselage section adjacent to the wingbody-intersection, the landing gear frame, seat frame and the shear frame of the wingbody-joint are positioned for the transmission of the several loads into the fuselage structure and to stiffen the structure in these sections. At its front side, the fuselage ends with the firewall at which the engine is attached to. The firewall, designed as a GFRP/CFRP sandwich composite, has on its front side in the engine compartment a fire protection lining that consists of a special fire-resistant ceramic fleece and a stainless steel sheet.

The landing gear frame, which supports together with the seat frame the main landing gear struts, is supplemented in the upper section by a compact CFRP/GFRP roll-over bar.

7.2.2 Wing

The wing is designed with a triple trapezoid planform that tapers off in winglets at its wing tips. The wing consists of an upper and a lower shell in GFRP sandwich composite design that are both locally reinforced by CFRP unidirectional straps in the region of the wing spar bonding area. Both, the left and the right wing form one structural unit which are connected by a rigid wing main spar in the middle section. The wing spar is a continuous unit from wing tip to wing tip and has a "double-T" (I-beam) cross-section with chords manufactured from CFRP unidirectional fibres (rovings) and a GFRP sandwich web.

Each wing half ends on its inboard side with a forward and rearward root rib, separated by the wing spar, which are joined to the shear frame in the fuselage mid section by a shear bolt on each fwd and rearward root rib. The four shear bolts are installed from the cabin through the fuselage bushings into the wing bolt housings in the wing root ribs and axially secured with bolts.

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 5



The outboard end of each wing half is shaped into a winglet, which contains the NAV-Lights, Anti-Collision Lights as well as the outlets of the fuel tank vents, to reduce the induced drag of the airplane. The inboard third of each wing half contains an integral fuel tank with a fuel capacity of 60 Litres which is integrated into the structure fwd of the wing spar.

The ailerons are located at the wing trailing edge in the outboard section of the wing near the wing tips. The ailerons are designed as semi-monocoque sandwich composite structures with an upper and lower shell consisting of structural foam cores embedded into a glass fibre laminate reinforced by carbon fibre plies.

In the inboard section of the trailing edge adjacent to the inboard end of the aileron, each wing is equipped with a single slotted flap that is attached on hinged lever arms to the trailing edge structure of the wing. Each flap is designed as a semi-monocoque sandwich composite structure with an upper and lower shell consisting of a structural foam core embedded into a glass and carbon fibre hybrid laminate.

The fulcrums of the flaps are located below the lower surface of the wing enabling an increasing gap between the wing trailing edge and the leading edge of the flap while the flaps are extending. As a result, the airflow over the upper surface of the flap is stabilized and higher angles of attack can be flown before stall sets in. Consequently, the lift of the aircraft is increased associated with a rise in drag as a detrimental effect.

7.2.3 Empennage

The vertical and horizontal stabilizers as well as the elevator and rudder are constructed in semi-monocoque sandwich composite design consisting of shells fabricated from GFRP sandwich composites reinforced by carbon fibre plies.

Both, the vertical and horizontal stabilizer are stiffened by a main spar and a rear web where hinge joints for the rudder and elevator attachment are integrated.

The horizontal stabilizer assembly is firmly bonded into the fuselage and cannot be removed. The VHF-NAV/COM antenna is located inside of the vertical stabilizer bonded on the inner surface of the shell.

7.3 FLIGHT CONTROLS

7.3.1 Aileron Control

The ailerons are operated by side deflections of both control sticks which are mechanically linked together to form a dual flight control system.

The control input is transferred to the control surfaces solely by push rods. In the mid section of the wing spar, the differentiation lever for the aileron control is mounted to adjust the deflection ratio between positive and negative deflection of the aileron control surfaces (differentiation). The deflections of the aileron control surfaces are effectively limited by adjustable stops that confine the travel of the control sticks.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 6



7.3.2 Elevator Control and Trim System

The elevator is operated by forward and rearward deflections of either control stick of the dual flight control system.

The control input is transferred to the control surfaces solely by push rods. The deflections of the elevator control surfaces are effectively limited by adjustable stops that confine the travel of the control stick.

An electrical trim system is installed into the aircraft that adjusts the pitch control force by modifying spring loads exerted on the elevator push rod. A failure of the trim system, such as trim-runaway, does not affect the aircraft controllability, only the control stick forces may become higher. The aircraft is trimmed nose down by pressing down the forward end of the trim switch whereas a nose up trimming is accomplished by pressing down the rear end of the switch. The actual trim position of the aircraft is indicated on the LED-bar of the Trim Position Indicator.

The trim switch activates an electrical trim actuator that is mounted parallel to the elevator pushrod under the floor panel of the baggage compartment. The trim actuator changes the preload of a pair of springs that exerts a defined force to the elevator push rod to adjust the pitch control force as selected by the pilot.

The electrical circuit of the trim system is protected by a circuit breaker that can be pulled in the case of a trim system malfunction. For the LEDs of the Trim Position Indicator, a separate circuit breaker is provided. All related circuit breakers are installed well accessible in the right section of the instrument panel.

7.3.3 Rudder Control

The rudder is operated by the rudder pedals in such a way that a left pedal input is transferred into a movement of the aircraft nose towards the left side and vice versa. Both, the right-hand rudder pedals as well as the left-hand rudder pedals of each seat are linked together by separated rudder control coupling shafts. The pedals themselves are attached at the end of the actuator arms of each control coupling shaft. In this way, a dual rudder control system is achieved.

Rudder control inputs are transferred by control cables that are specially guided to minimize friction. The control surface travel is limited by stops at the lower rudder attachment fitting.

Precise control and a good manoeuvrability during taxiing on ground is accomplished by a direct linkage of the nose wheel steering mechanism with the rudder pedals (refer also to para. 7.5.1 of this manual). To gain a minimum turn radius the brakes may be additionally used as a supportive measure.

The distance between the seat and the rudder pedals can be easily adjusted to the pilot's need by a seat adjustment that is in a wide range continuously adjustable fore and aft (for seat adjustment, refer to para. 7.5.1 of this handbook).

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 7

AQUILA Aviation

CAUTION

Check the proper seat position before every engine start-up to ensure the availability ot the full operating range of the nose wheel steering and the toe brakes.

7.3.4 Flap Control and Flap Position Indication

The flaps are operated and fixed in the selected position by an electrical flap actuator. A three-position selector switch is incorporated in the instrument panel for flap operation. The switch position in combination with the associated indicator light correlates in its orientation to the position of the trailing edge of the flap when extended in the 35° landing position, in the 17° take-off position and when retracted (three-position selector switch is in its most up position).

If the flap switch is brought into another position, the flaps will extend until the selected flap position is reached and the flap movement will be automatically stopped. As the flap actuator has a reduction gear and a self-locking spindle, the flaps will be fixed in position in case of an electrical power failure.

Colour markings on the flap leading edge (see also page 2-10) offer an additional reliable possibility for a visual check of the flap position. The flap position correspond to the coloured bar that is barely visible between the leading edge of the flap and the trailing edge of the upper wing shell (for the colour code, refer to section 2.16 which contains all placards and markings).


The electrical circuit of the flap control system is protected by a 10A circuit breaker that can be manually pulled if required.

For the LED's of the flap position indication, a separate circuit breaker is provided. All related circuit breakers are installed well accessible in the right section of the instrument panel.

7.3.5 Control Stick Lock

While parking, the control stick should be secured to prevent damage to the parked aircraft by gusts or strong winds. For that purpose, pull the stick up to the control stop and secure the stick in this position with the safety belt by closing the safety belt locking mechanism and tightening the belt straps.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 8

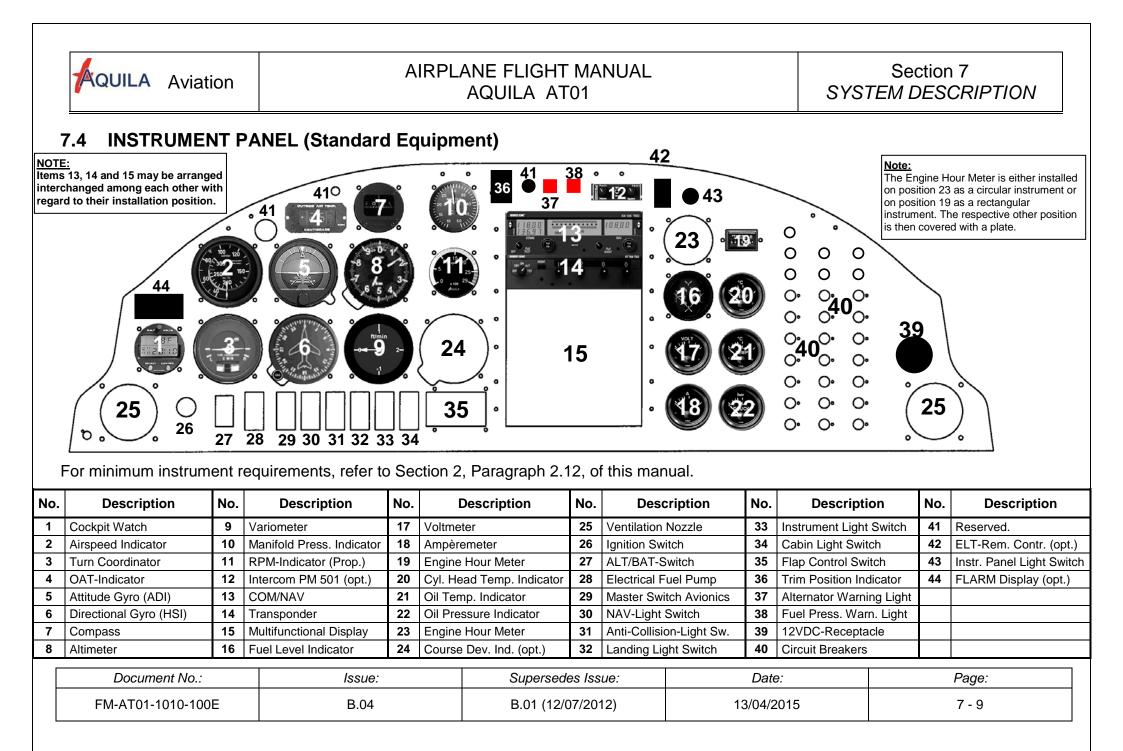



7.4.1 Flight Instruments

The flight instruments are located in the instrument panel in front of the pilot's seat.

7.4.2 Switches and Other Controls


The switches for all electrical systems are arranged in a row below the flight instruments on the right side adjacent to the ignition switch.

On the control panel below the midsection of the instrument panel, the control elements for the Carburettor Heat, Choke and the Cabin Heat are located. The Throttle Lever and the Propeller Control Lever (with a blue star-shaped knob) are located well accessible in the forward section of the centre pedestal. Rearward of the fore-mentioned control elements, the Trim Switch, the Fuel Selector/Shut-off Valve and the Parking Brake Control Lever are positioned in the rear section of the centre pedestal between the seats.

The pulling of the control elements for the Carburettor Heat, Choke, Cabin Heat and Parking Brake causes the activation of the respective system.

For example, if the control element for the Choke is pulled the starting carburettors will be opened to enrich the mixture for the start-up of the cold engine, but only if the Throttle Lever is in the IDLE position (rear stop). The choke control element is spring loaded, i.e. if the control knob is released the control element goes automatically back into the off-position.

Full power and minimum propeller pitch (Take-off Position) is adjusted by moving both the Throttle and Propeller Control to its most forward positions (up to the stops).

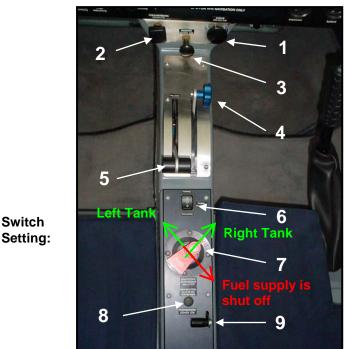

Switch

No.	Description
1	Choke Control Element
2	Carburettor Heat Control Element
3	Cabin Heat Control Element
4	Propeller Control Lever
5	Throttle Lever
6	Trim Switch
7	Fuel Selector/Shut-off Valve
8	Reserved
9	Parking Brake Control Element

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 10



7.4.3 Cabin Heat

For the cabin heating, ram air is heated in a shrouded chamber at the exhaust muffler and flows through a duct into the cabin if the heat control valve is opened. Behind the firewall, the heated air is subdivided for windshield defrosting and cabin heating. The control element to open or close the heat control valve is located in the control panel below the midsection of the instrument panel.

7.4.4 Cabin Ventilation

Two adjustable ventilation nozzles are located on both sides of the instrument panel to supply the cabin with fresh air. The amount and direction of fresh airflow can be adjusted individually for each seat by pivot-mounted nozzle outlets. If required, the sash windows of the canopy may additionally be opened for the ventilation of the cabin.

7.5 UNDERCARRIAGE

The landing gear consists of a steerable nose gear that is equipped with a shock absorber and a main landing gear. To provide precise control of the aircraft while taxiing on ground, the nose gear strut is directly linked with the rudder pedals.

The main gear struts are designed as leaf springs to absorb the touch-down loads during landing. Hydraulically actuated disc brakes are provided on the main gear wheels which are activated by tilting the rudder pedals in the forward direction.

Because of the robust landing gear and the 5.00×5 wheels on the nose and main landing gear in combination with sturdy wheel fairings, the aircraft is suitable for the operation on airfields with grass runway.

7.5.1 Nose Landing Gear and Nose Gear Steering

The nose landing gear consists of a tubular steel strut that is attached pivot-mounted to the engine frame support.

A portion of the nose gear loads is directly transferred into the front structure of the fuselage via the lower attachment fittings of the engine frame support by two support struts.

Good shock absorption and suspension characteristics are provided by a shock absorber unit equipped with stacked rubber springs which acts directly on the nose wheel fork.

The steering of the nose wheel is accomplished by a spring loaded steering rod assembly that connects the nose gear steering arm at the upper end of the nose gear

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 11



strut to the cantilever arms on the rudder control coupling shaft. That direct linkage of the nose wheel with the rudder control is also active during flight.

The direct linkage between the nose wheel steering and rudder operation allows a swift taxiing, precise taxi manoeuvres and small turn radii, also in crosswind conditions without braking. To gain minimum turn radii, the brakes may be supplementary used as a supportive measure.

7.5.2 Main Landing Gear and Brake System

The main landing gear consists of two cantilever struts which act as leaf-springs to absorb the touch-down loads on the undercarriage. The main wheels are equipped with hydraulically actuated disc brakes. The brakes are individually activated on each side by tilting the corresponding rudder pedal in the cockpit backwards with the toe. The actuation of the left and right wheel brake occurs independently of each other by two separate brake circuits.

During the pre-flight check in the cockpit make sure that the feet are well positioned on the combined rudder/toe brake pedals by an adequate seat adjustment to allow full rudder deflection of the pedals while simultaneously applying maximum brakes. Furthermore, make sure that full pedal deflection to each side (full rudder and maximum braking) is not hindered by the firewall or any other attached parts in the direct vicinity.

7.5.3 Parking Brake

The parking brake mechanism uses the hydraulic disc brakes and brake circuits of the main landing gear wheels. For this purpose, a manually operated valve locks the applied rudder pedal tilt and hence the applied brake pressures in the left and right wheel brake system when activated.

The parking brake control element is located between the seats in the rear section of the centre pedestal. To set parking brake, the wheel brakes have to be applied with the rudder pedals and, when the desired brake power is achieved, the control element has to be pulled into the lock position and held. After releasing the toe pressure on the pedal tips, the pedals should remain in their tilted position.

To release the parking brake, push down the control knob up to its end stop.

7.6 SEATS, SEATBELTS AND HARNESSES

The seats of the AQUILA AT01 are fabricated from composite materials and are equipped with integrated safety head rests and removable hard-wearing seat cushions.

A stepless fore and aft seat adjustment meets the ergonomic requirements of a wide pilot spectrum. In addition, the seat tracks are inclined upwards in the forward direction

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 12



so that smaller pilots will be positioned slightly higher as they adjust the seat forward. An oil/gas spring strut with locking mechanism holds the seat in the adjusted position. The seats as well as the floor panels that cover the control system and other underfloor installed devices and systems may be removed for visual inspections and maintenance.

Both seats are equipped with four-part seat belts with a central rotary buckle. The shoulder harnesses are connected with inertia reel units. While the shoulder harnesses tighten automatically, the lap belts have to be manually tightened at the adjuster buckle. A slight tilting of the adjustor buckle is necessary for the extension of the lap belts.

To fasten the seat belts, click each belt fitting successively into the associated receptacles of the rotary buckle until a distinctive "snap" sound is audible to lock them together. The seat belts can be opened by turning the handle of the rotary buckle in the clockwise direction.

7.6.1 Seat Adjustment

The seats should be adequately adjusted before the seat belts and shoulder harnesses are fastened. With the seat in the desired position, it has to be verified that all control elements and especially the rudder pedals are well accessible and can be properly operated. To position the seat, a Push Knob has to be pushed to unlock the oil/gas spring strut. The push knob is located underneath the forward edge of the thigh rest of each seat adjacent to the control stick cut-out.

Due to the gas springs of the seat adjustment system in combination with the rolling bearings in the seat track, only small forces are necessary to move the seats into the desired direction. The seats are locked in place by releasing the push knob.

7.7 BAGGAGE COMPARTMENT

The AQUILA AT01 incorporates a large baggage compartment behind the seats which can be loaded through a lockable baggage door. The baggage compartment is also accessible through the cabin. To ease the stowing of bulky baggage through the cabin, the seats may be moved in their forward position.

The baggage compartment floor with the exception of a small centre tunnel is equipped with an anti-skid carpet. The maximum permissible load is **40 kilograms**. The weight and centre of gravity limits of the airplane (refer to Section 6 of this handbook) must be observed when loading the airplane. The baggage door must be locked during flight.

Tie-down rings for straps are provided on the floor panels of the baggage compartment to strap down baggage and other payload. Suitable tie-down straps may be purchased

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 13



from the manufacturer. For small or loose articles, a baggage net is recommended that is available as spare part.

CAUTION

During the pre-flight check, verify that the baggage door is closed and locked.

CAUTION

The aircraft mass and centre of gravity position must be within the approved range after the loading of the aircraft is completed.

7.8 CANOPY

The big canopy of the AQUILA AT01 offers an excellent all around view. It consists of a rear portion with a window which is bonded into the fuselage structure and a large onepiece acrylic glass dome bonded into a composite frame that can be swivelled forward to open for a comfortable cabin entry. Small sash windows on both sides serve as emergency view windows and can be used for additional cabin ventilation. The canopy is connected to the fuselage at its forward end by a hinge assembly that is attached to the firewall structure. The canopy is rotated upwards around this fixed hinge when opened.

Opening, closing and locking of the canopy can be achieved by a hand lever in the canopy frame which is located on the left side. In case of emergency, this hand lever may also be operated from the right seat. Pulling and turning the hand lever backwards (to the pilot) unlocks the canopy for opening. The reverse action, pushing and turning the lever forward is locking the canopy for flight. From outside the canopy locking mechanism is operated in the same manner but with opposite direction.

To ease the opening and closing of the canopy, a handle located on the inner side of the canopy frame in the centre section of its rearward end above and between the pilots is provided. A gas spring strut provides effective assistance while opening the canopy.

Although the canopy frame and its support as well as the hinge assembly are of stable design, the load on the hinge mechanism and the attachment brackets, however, may become considerably in strong wind conditions due to the size and geometry of the canopy, when it is opened. To prevent an inadvertent closing and damage to the canopy, never leave the canopy open under such conditions. In addition, always secure the canopy by hand while moving the canopy in strong wind conditions.

To evacuate the aircraft in an emergency case, an emergency hammer to smash the acrylic glass is attached to the co-pilot's seat back.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 14



CAUTION

When locking the canopy make sure that the canopy frame rests flush on the fuselage. Push the handle on the top of the canopy frame upwards and check the position of the locking handle to make sure that it is locked and can not be unlocked during flight due to vibrations.

7.9 **POWER PLANT**

The AQUILA AT01 is powered by a ROTAX 912 S engine which is a four-stroke cycle engine with four cylinders horizontally opposed. The normal aspirated engine is in standard configuration equipped with a dual breakerless capacitor discharge ignition system and a reduction gearbox with integrated shock absorbers and overload clutch. The engine drives a propeller manufactured by mt-propeller that is controlled by a hydraulic constant speed governor.

The displacement of the engine is 1352 cm³, the compression ratio 10.5 : 1. The engine may be operated with AVGAS 100 LL or UL 91, with unleaded EN 228 Premium and with EN 228 Premium plus fuel. The engine manufacturer recommends the use of unleaded fuels in accordance with EN 228 (MOGAS).

During the installation process into the AQUILA AT01, the maximum engine speed is adjusted to 5500 RPM by limiting the lowest possible propeller pitch setting which results in a propeller speed of 2263 RPM to reduce noise emission level. This RPMvalue corresponds to the maximum continuous speed authorized by the engine manufacturer. For the operation of the AQUILA AT01, a maximum continuous power of 69 kilowatt (kW) is available.

Due to the installation of the 2-blade MTV-21-A/175-05 propeller manufactured by mt-Propeller in wood-composite-hybrid design and an especially designed exhaust system, the AQUILA AT01 exhibits an extremely low noise and vibration level. The aircraft has demonstrated a noise level of 64.6 dB(A) which is 7.7 dB(A) below the noise level limit in accordance with the "Noise Requirements for Aircraft" (LSL) Chapter X (refer also to paragraph 5.2.14 of this manual).

The integration of the engine into the fuselage structure is achieved with a frame support designed as a truss which in addition serves as the support of the Nose Landing Gear Strut, the battery as well as miscellaneous engine accessories. The engine is flanged on the frame support with its original ROTAX ring frame support using vibration absorbing Shock-Mounts in the attachment points. The engine frame support itself, in turn, is mounted to the firewall at four attachment points. All engine related loads (engine, gearbox, propeller) and the nose gear loads are transferred into the firewall of the fuselage structure via the described engine suspension arrangement.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 15



7.9.1 Engine

The ROTAX 912 S engine is equipped with liquid cooled cylinder heads, ram-air cooled cylinders and a dry sump forced lubrication system. The engine has two carburettors, one for the right cylinders and one for the left cylinders of the engine. For oil and engine coolant cooling, a combined oil cooler/radiator is installed in the front part of the lower engine cowling behind the main cooling air intake. The cooling air baffle for cylinder cooling is connected through a flexible duct with a round air inlet in the front part of the lower engine cowling. The cooling air is discharged out of the engine compartment by an opening at the bottom rear edge of the cowling where also the exhaust end pipe is guided to the exterior of the aircraft.

The exhaust system components are connected through ball joints that are joined with two springs on each side to allow movements due to heat expansion and normal operating loads at the connections and to prevent fatigue fracture due to vibrations. Carburettor induction air enters the system through a NACA air inlet on the left side of the lower engine cowling and is carried through an air filter box and a flexible duct to the carburettor airbox. The ignition harness of the dual capacitor discharge ignition system is connected through plug connectors (spark plug connectors) to the spark plugs of the cylinders. Each cylinder is equipped with 2 spark plugs which are supplied by different ignition circuits (left and right ignition circuit, refer also to ROTAX Operator's Manual).

The engine coolant is refilled in the expansion tank, located on top of the engine. A transparent overflow bottle, mounted on the right engine side, is connected with the expansion tank by a hose. The overflow bottle is accessible through a service door located on the right side of the upper engine cowling. This service door also allows the checking of the engine oil and coolant levels and their replenishing, if necessary, without removing the engine cowling. These checks are described in Section 4 of this manual, paragraph "Daily Pre-flight Check".

The propeller reduction gearbox includes an integrated torsion shock absorber and an overload clutch. A support is incorporated on the backside of the gearbox housing where the propeller governor is flanged on.

The propeller governor and the reduction gearbox are integrated into the oil circuit of the engine. For this reason, the engine oil must fulfil a series of specific characteristics. The use of semi- or full synthetic oils for four-stroke motor cycle engines classified according to the API-system as "SG" or higher with gearbox additives and a wide temperature range is recommended. Friction modifier additives must not be contained in the oil as this could result in an undue slipping of the overload clutch during normal operation. Never use aviation grade engine oil or diesel engine oil. For complete information regarding engine oil and oil change intervals, refer to $ROTAX_{\textcircled{s}}$ Operator's Manual and to the ROTAX $_{\textcircled{s}}$ Service Instruction SI-912-016.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 16



CAUTION

The specifications for operating fluids issued by ROTAX® Aircraft Engines Inc. for the 912S engine must be adhered to.

CAUTION

Before every takeoff, a functional check of both ignition circuits must be performed. For more information on the engine, refer to ROTAX_® Operator's Manual.

7.9.2 Throttle and Choke

The throttle control lever is well accessible for both, the pilot as well as the co-pilot, located in the front section of the centre pedestal adjacent to the left of the propeller control lever (blue star-shaped knob). During throttle lever operation, the throttle valves of both carburettors are actuated synchronously by two bowden cables.

For full engine power (max. manifold pressure), both, the throttle and the propeller control lever, should be placed in full forward position. Idle power is adjusted by moving the throttle lever to the full aft position.

The starting carburettor is actuated by pulling the control element for the choke which is located on the control panel below the midsection of the instrument panel adjacent to the control elements for the carburettor and cabin heat. When the choke is activated, the starting carburettor enriches the fuel mixture for the start-up of the cold engine. The starting carburettor is only operating if the throttle lever is in the IDLE position.

The choke should only be used for a short period of time during the start-up of the cold engines. After releasing, the spring loaded control knob returns automatically into the OFF position.

CAUTION

Regular checks are mandatory to verify that the throttle and starting carburettor control arms are able to reach their stops.

Before every takeoff, check if the choke control element has completely returned into its OFF position.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 17

7.9.3 Propeller and Propeller Control

The AQUILA AT01 is equipped with a two-blade hydraulically controlled variable pitch propeller (constant speed propeller) in wood-composite-hybrid design for thrust generation. The propeller blades are constructed with a wooden core covered by glass fibre reinforced epoxy layers and are equipped with a stainless steel leading edge protection in the outer section of the blade and in the inner section with a self-adhesive PU-strip.

The adjustment of the propeller blade pitch is accomplished by a hydraulically operated propeller governor that increases the pitch against a spring load. The oil-hydraulic governor keeps the pre-selected propeller speed at a constant value regardless of manifold pressure and airspeed (constant-speed-control). In the case of oil pressure loss, the blades will be automatically set into lowest pitch position. This ensures the further availability of full power. A feathering system is not provided in this type of propeller.

The propeller speed is selected by the propeller control lever that is located in view of the pilot and well accessible in the front section of the centre pedestal adjacent to the ride side of the throttle lever. Lowest pitch and highest propeller speed is adjusted by moving the control lever into the full forward position. With the control lever in this position in combination with the throttle fully opened, maximum engine power is obtained which is normally required during take-off and initial climb. In the final approach for landing, the low pitch setting is also used in order to increase the propeller drag force with low power setting and to have full climb power in case of a missed approach. During the climb and cruise segment, the manifold pressure (throttle position) and the propeller pitch are normally adjusted on each other. Refer to Section 5 of this manual and to ROTAX_® 912S Operator's Manual for more information.



Prior to every take-off, the propeller control lever should be continuously switched between the end positions several times. Besides of transferring oil into the governor while simultaneously conducting a functional checking of the system, an additional flushing of the governor is achieved during this procedure to avoid the formation of deposits (e.g. lead contained in the fuel).

7.9.4 Carburettor Heat

The Carburettor heat system supplies the carburettors with preheated air. The carburettor heat push-pull type control element is located on the control panel below the midsection of the instrument panel adjacent to the control elements for the Choke and Cabin Heat actuation. By pulling the carburettor heat control element, two coupled flap

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 18



valves in the air inlet duct of the airbox are actuated which stop the direct air supply from the air intake and simultaneously open the supply of preheated air from the exhaust muffler area to enter the carburettors. The correct use of carburettor heat prevents the forming of carburettor ice that may cause rough engine operation culminating in a total engine failure in the worst case. If carburettor icing is already encountered, it normally can be slowly removed by activating the carburettor heat and, at the same time, the engine power setting isn't changed.

Carburettor heat must be used in accordance with the common rules and procedures.

A carburettor heat functional check has to be performed during every pre-flight check. After engaging the carburettor heat at a Propeller Speed of 1700 RPM, the RPM drop should be at least 20 – 50 RPM.

CAUTION

The activated Carburettor Heat reduces the engine power.

7.10 FUEL SYSTEM

The AQUILA AT01 is equipped with a drainable integral fuel tank in each wing. The fuel capacity of each tank is approximately 60 Litres, the unusable fuel portion is 5.2 Litres per tank.

The fuel tanks are located in the inboard third of each wing half, forward of the main spar. Each fuel tank is confined by the upper and lower wing skin structure which is reinforced and specially sealed in this area, the wing spar as well as the inboard and outboard fuel tank rib on each span-wise side. Each fuel tank is furnished with a lockable fuel filler cap unit which is bonded into the wing structure flush with the upper wing skin. Both fuel filler cap units are grounded to the airframe.

The fuel supply of the carburettors is accomplished by the engine driven mechanical fuel pump from the fuel tank that is pre-selected at the fuel selector/shut-off valve. An additional electrical fuel pump is provided as a backup system in case of the failure of the engine driven fuel pump or for situations where the supplied fuel pressure is too low. Excess fuel flows back to the pre-selected fuel tank through return lines and the fuel selector/shut-off valve. The fuel return line is connected to the inboard fuel tank rib of each fuel tank.

Low fuel pressure in the fuel supply lines of the carburettors (below 0.15 bar / 2.2 PSI) is detected by a fuel pressure sensor and indicated on the instrument panel by a red warning light. In the case of too low fuel pressure, the electrical fuel pump has to be engaged as well.

The fuel system schematic is shown on the next page.


Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 19



CAUTION

The electrical fuel pump must be switch on during all take-offs and landings as well as in those cases where too low fuel pressure is indicated by the fuel pressure warning light.

Fuel System Schematic

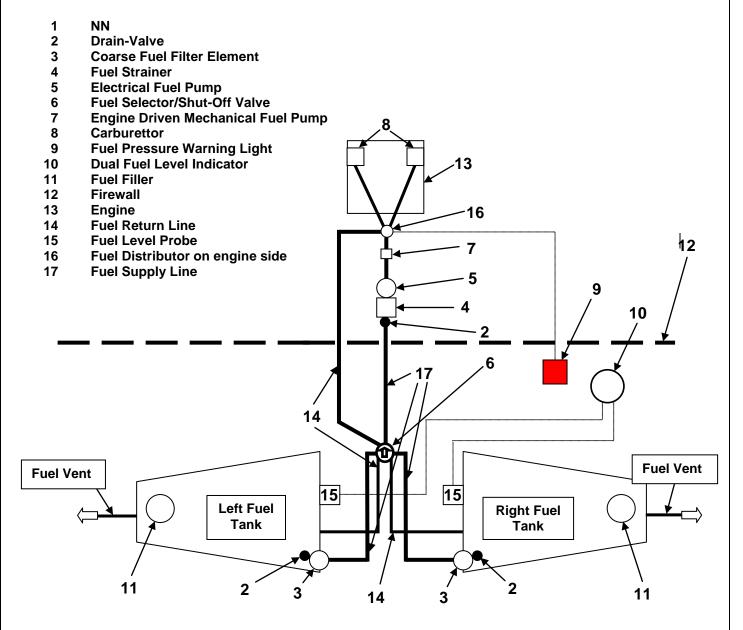

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 20



7.10.1 Fuel Storage and Ventilation

The inner surfaces of the composite integral tanks are coated with a special fuel tank sealant to protect the fibre composite structure against decomposition. To dampen, harmonize and smooth the fuel motion in the fuel supply outlet nozzle and fuel probe area, an anti-sloshing baffle with special perforation is integrated into the fuel tanks near the fuel supply outlet.

The fuel tanks are vented at the topmost point of each fuel tank through a vent line that is connected to the fuel tank at the upper edge of the outboard fuel tank rib and is guided through the outboard section of the wing to the vent line outlet located in the winglets.

The fuel supply outlet nozzle of each tank, which is equipped with a removable coarse fuel filter element, is located in the lower rearward corner of the inboard fuel tank rib above the fuel sump level. From this outlet nozzle, the fuel flows in the fuel supply lines through the Fuel Selector/Shut-Off Valve located in the fuselage below the centre pedestal, the electrical fuel pump that is attached to the firewall adjacent to its lower edge, the engine driven mechanical fuel pump and the fuel distributor to the float chambers of the carburettors. Fuel that is supplied in excess returns from the fuel distributor in Fuel Return Lines through the Fuel Selector/Shut-off Valve back into the pre-selected fuel tank.

The installations in the inboard fuel tank ribs are well accessible for maintenance through an access opening on the lower wing surface.

Each fuel tank is equipped with an individual manually operated drain valve located at the lowest point of the fuel tank sump to check the fuel for water and deposits during pre-flight checks. A further drain valve is installed at the lowest point of the entire fuel system which is at the outlet of the electrical fuel pump. This drain valve is accessible at the bottom of the fuselage in front of the firewall.

7.10.2 Fuel Selector / Shut-Off Valve

For the selection of the fuel tank and to interrupt the fuel supply in the case of an emergency, a Fuel Selector/Shut-off Valve is provided within the fuel system. The selector handle is mounted well accessible and well visible for both pilots on the centre pedestal between the seats (see also the picture on page 7-10).

The red, arrow shaped handle has a LEFT, RIGHT, and OFF-position. Each position has a positive detent and is self-actuating centred in its switch setting by a spring-loaded pin. To switch the valve into the OFF-position, a knob located at the top of the handle must be pulled simultaneously while turning the handle clockwise into the OFF-position. With the valve in this position which is indicated by the selector pointing in the right rearward diagonal direction, the fuel flow in the supply and return lines is interrupted.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 21



In both normal operating positions (LEFT/RIGHT), the fuel supply and corresponding return line of the selected fuel tank are opened, whereas the fuel supply and return line of the other fuel tank are closed. The valve-handle points towards the direction of the fuel tank being selected.

It is recommended to keep the fuel level in both tanks approximately on same levels. For this reason, a switch-over from one tank to the other should be performed in an hourly interval.

7.10.3 Electrical Fuel Pump and Fuel Strainer

The electrical fuel pump is incorporated into the fuel system without a bypass line. In this arrangement, the fuel passes through the electrical fuel pump and a fuel strainer element integrated into its housing even if the electrical fuel pump is switched off. This fuel strainer element is replaceable when the housing of the electrical fuel pump is disassembled.

The electrical fuel pump is installed inside the engine compartment attached to the firewall near its lower edge. Below the electrical fuel pump, the lowest point of the entire fuel system, a fuel drain valve is provided for the drainage of water and deposits from the fuel system. The drain valve is accessible at the lower surface of the fuselage bottom adjacent to the firewall section. A further filter element is integrated into the engine driven mechanical fuel pump which is only renewable by replacing the entire fuel pump unit.

The 12 VDC electrical power supply for the electrical fuel pump is provided by the main electrical bus. The operation of the electrical fuel pump can be controlled by a rocker switch located in the row of switches in the lower left section of the instrument panel. During all take-offs, landings and other critical flight phases as well as in those cases where too low fuel pressure is indicated, the electrical fuel pump has to be switched ON. The proper function of the pump motor can be identified on ground by the distinctive "ticking" sound when the fuel pump is activated. Refer also to Section 4.4 "Pre-flight Inspections" of this manual for more details.

7.10.4 Fuel Level Indication


A fuel level probe installed in the inboard fuel tank rib of each fuel tank generates and transmits an electrical signal, depending on the fuel level in the tank, to a dual fuel level indicator located in the right section of the instrument panel. The fuel level indicator has the markings FULL, $\frac{3}{4}$, $\frac{1}{2}$, $\frac{1}{4}$, and EMPTY for each tank.

The aircraft attitude has a minor effect on the well readable fuel level indication. However, measuring systems never work without error and must be accepted as not safe in the absence of redundancies because of possible defects. Therefore, a marked dipstick for verifying the fuel level manually is delivered with the aircraft. With the aircraft in a horizontally and laterally level position, the dip-stick should be perpendicularly inserted into the fuel tank in such a way that the handle of the dipstick is completely

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 22



seated on the upper surface of the wing. After pulling the dipstick out of the fuel tank, the fuel level can be determined by the "wetted" area of the dipstick in comparison with the respective engraved markings and may be compared with the electrical fuel level indication on the instrument in the cockpit. This check has to be performed at least during every daily pre-flight check. For this reason, the dip-stick should always be carried in the aircraft. It is stowed at the inboard side of the baggage compartment door.

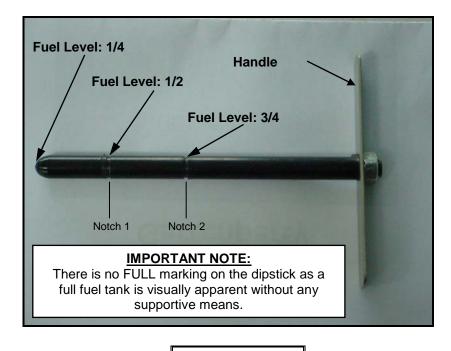

CAUTION

The fuel level indication on the instrument has to be cross-checked with the fuel dipstick daily. For that, level out the aircraft horizontally and laterally as much as possible. The dipstick markings show ½ and ¾ of the maximum fuel tank content.



During the refuelling, the aircraft must be electrically grounded at the marked grounding point (outlet of the exhaust tail pipe, refer also to placard 39 pg. 2-17).

7.10.5 Fuel Tank Drainage System

Each fuel tank is equipped with its own, manually operated, drain valve at the lowest point of the fuel tank located in the inboard rear corner adjacent to the tank rib. A further drain valve is installed at the lowest point of the entire fuel system which is located at the base of the electrical fuel pump. This drain valve is accessible at the lower surface of the nose section without the removal of any components.

The attachment clip for the fuel sample cup is located at the inboard side of the baggage compartment door.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 23



CAUTION

The check of the fuel sump for water and deposits has to be performed during every daily pre-flight inspection. Samples have to be taken at all three drain valves BEFORE the aircraft is moved and hence the fuel sump intermixed.

7.11 ELECTRICAL SYSTEM

The AT01 is equipped with a 12 V direct current (DC) electrical system that is powered by an engine driven alternator and a battery. The electrical equipment is operated and controlled by rocker switches which are located on the lower left section of the instrument panel provided that the red "ALT/BAT"-Master Switch is engaged. All electrical circuits are protected with circuit breakers which are all well accessibly arranged in the right section of the instrument panel.

The control and operation of the engine ignition system as well as the tachometer work completely independent of the aircraft power supply system.

7.11.1 Power Supply and Battery System

The 12 V lead-acid battery is connected to the electrical system of the aircraft via a 50amp circuit breaker and the red BAT-Switch. With engine operating, the battery is charged by a 40-amp external alternator that is equipped with an internal regulator and | protected by the 50-amp alternator circuit breaker. The air-cooled alternator is driven via V-belt drive geared down from the propeller shaft.

In the case of insufficient charging by the alternator, the "Alternator" warning light located in the upper mid-section of the instrument panel will illuminate. In addition, an ammeter and voltmeter are installed in the right section of the instrument panel for monitoring the battery charging rate and its charging condition.

In the event of an alternator failure, the battery is able to supply the complete electrical system with all electrical accessories for at least half an hour provided that it is correctly maintained and in a good condition.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 24



7.11.2 Ignition System and Starter

The engine is equipped with an electronically controlled ignition system of a breakerless capacitor discharge design that has two separate ignition circuits which are independent of each other. The ignition system needs no external power supply and is activated by the ignition switch. The internal control unit interrupts the ignition if the propeller speed is below 100 RPM.

The ignition switch is operated clockwise from the OFF-Position via the R, L, BOTH positions into the START-Position. When the switch is turned into the spring loaded START-Position the engine starter is activated and cranks the engine. When the switch is released, it will automatically return to the BOTH-Position and the engine starter is deactivated. The BOTH-Position is the setting for normal operation with both ignition circuit activated and hence both spark plugs in each cylinder operating.

With the positions R and L selected, one of the two ignition circuits is deactivated which is the case during the functional check of the ignition system. With a propeller speed of 1700 RPM the RPM-drop on either magneto should not exceed 120 RPM and the difference between the L and R settings should not exceed 50 RPM.

Further information for engine operation and pre-flight checks are contained in the Operator's Manual for all versions of ROTAX_® 912 engines.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 25



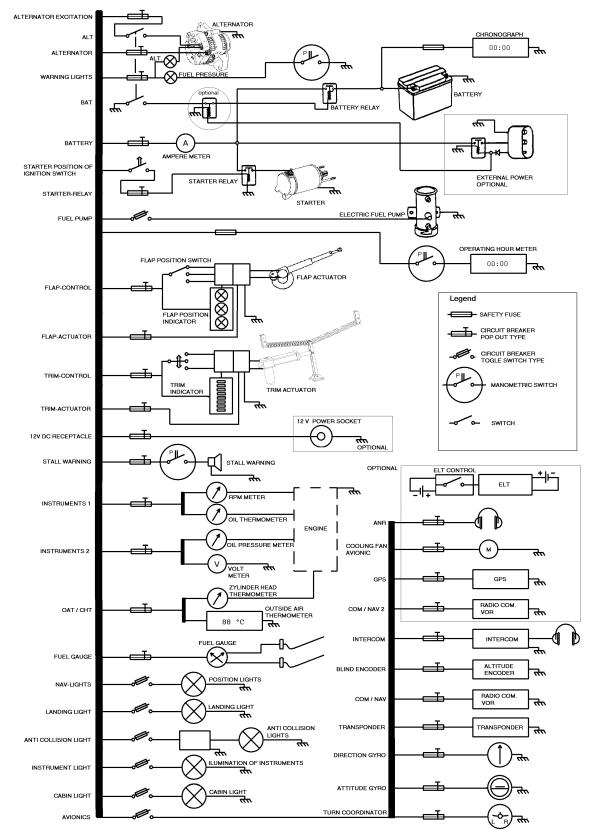


Fig.: Electrical System Schematic

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 26



7.11.3 Electrical Equipment and Circuit Breakers

All electrical equipment may be separately turned on or off by circuit breakers of pushpull type or by rocker switches with built-in circuit breaker function.

NAV/COM-equipment as well as other avionic equipment is supplied with electrical power via the avionic master switch and the avionic main bus and is protected with separate circuit breakers. For each electrical system that must be turned on and off several times during normal operation (electrical fuel pump, anti-collision lights etc.), a separate rocker switch located in the lower left section of the instrument panel is provided for their operation. The circuit breakers for all other electrical equipment are located in the right section of the instrument panel (refer also to the figure on page 7-9).

7.11.4 Voltmeter and Ammeter

The voltmeter shows the system voltage generated by the power sources. The voltmeter indication scale is subdivided into three different coloured voltage ranges:

Red Arc	8-11	Volt
Red-green crosshatched Arc	11-12	Volt
Green Arc	12-15	Volt
Red line	15-16	Volt

The ammeter indicates the amount of current flow, in amperes, from the alternator to the battery or from the battery to the electrical system of the aircraft, depending on the algebraic sign of the indication. An indication in the (+)-range of the instrument scale displays the charging current to the battery, whereas an indication in the (-)-range of the instrument scale shows the discharging current of the battery. This means that the battery is supplying the electrical system of the aircraft and might be a sign of an alternator malfunction if such an indication occurs during normal engine operating conditions.

7.11.5 Alternator Warning Light

The red alternator warning light does not illuminate during normal operation. The warning light will illuminate only if:

- An alternator failure (Loss of external alternator output) occurs

In these cases, all electrical power is supplied solely by the battery. This does not affect the operation of the engine ignition system because it depends exclusively on the function of the engine internal generator.

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 27

7.11.6 Fuel Pressure Warning Light

If the fuel pressure at the fuel distributor in the fuel supply line to the carburettors drops below 0.15 bar, a pressure-controlled switch activates the red fuel pressure warning light located in the upper mid-section of the instrument panel. Probable causes may be:

- insufficient fuel supply;
- Fuel vapour in the system.

7.11.7 Engine Instruments and Fuel Level Indicator

Cylinder head temperature and oil temperature as well as oil pressure are indicated on analogue pointer instruments. These instruments receive their electrical signals from resistance-type probes located in the engine, and translate them in appropriate readings.

The analogue dual fuel level indicator receives its measuring signals by two fuel level probes, one in each tank.

7.11.8 External Power Unit

It is recommended to use an External Power Unit (EPU) for engine start-up at outside air temperatures below -10° C. The EPU receptacle and the related circuits which are both optionally installed provide the opportunity to connect an external power source to the aircraft for engine start-up. The receptacle is mounted on the right fuselage side below the battery. Access is provided by a service door in the lower cowling.

Electrical power for the engine starter and the electrical buses is provided via a three pole receptacle with protection for reverse polarity by a relay circuit. A second relay is disconnecting the on-board battery as long as the external power source is connected to the aircraft. This second relay prevents an uncontrolled charging or discharging of the battery during the EPU operation.

WARNING

Before starting the engine with external power, make sure that **NO** persons or objects are near the propeller disk area.

Procedure for starting up the engine with an external power source:

- 1. Plug in the external power source at the receptacle
- 2. ALT/BAT switch ON
- 3. Engine Start-up (in accordance with paragraph 4.5.2 "Engine Start-up")
- 4. Disconnect external power source

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 28



7.12 PITOT-STATIC SYSTEM

Total and Static Pressure are taken from a pitot-static tube installed on the lower surface of the left wing and are transferred through the interior of the wing to the wing-body intersection by total and static pressure lines. At the wing-body-joint, the pressure lines are connected to water separators and disconnection couplings to enable a simple and easy demounting of the wing.

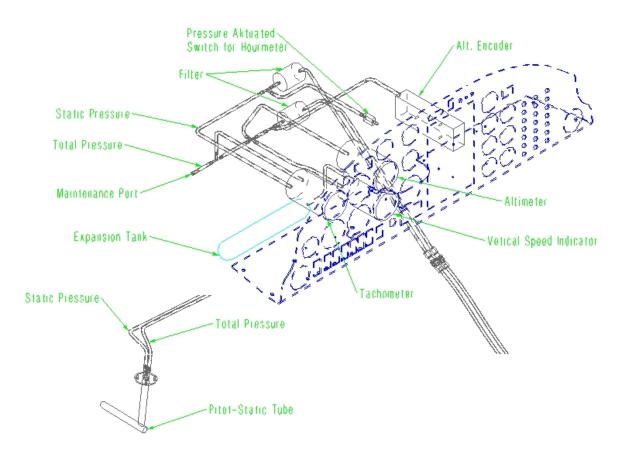


Figure: Pitot-Static System Schematic

Another disconnection point for the pressure lines is provided behind the instrument panel at the location of the dust filters. Behind the disconnection point and the dust filters, the total pressure line is connected to the airspeed indicator and the static pressure line is distributed using tee connectors to supply the airspeed indicator, the altimeter, the vertical speed indicator and the altitude blind encoder with static pressure.

The vertical speed indicator is additionally connected via a pressure line to an expansion tank that is installed below the cockpit floor panel.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 29



The pitot-static system error may be ignored for the altitude measurement. An airspeed calibration chart is provided in Section 5 of this manual.

While the aircraft is parked on the ground, the pitot-static tube cover delivered with the aircraft and labelled with the tag "Remove Before Flight" should always be placed over the pitot-static tube to prevent insects, water and dirt entering and clogging the orifices of the pitot-static tube.

If erroneous instrument readings are suspected, an inspection of the pitot-static system for obstructions, damages, clogging (water, foreign objects, damaged pressure lines etc.) and leakage must be performed. A defective instrument is rather rarely the cause.

CAUTION

During daily pre-flight inspection, the pitot-static tube cover must be removed, and a system check should be conducted. For this purpose, a person may momentarily blow into the direction of the pitot-static tube from a distance of approximately 10 cm. A second person has to monitor the indication of the appropriate instruments (airspeed indicator, altimeter, vertical speed indicator) in the cockpit for associated pointer deflections.

During the pre-flight check, verify the pitot-static tube cover is removed from the tube.

7.13 STALL WARNING SYSTEM

An approach to stalling condition at 1.1 times the stalling speed is indicated for all flap settings by a loud audible alarm signal.

As the aircraft approaches stalling condition, a switch at the leading edge of the LH wing is activated due to the change in airflow with increasing angle-of-attack. The airflow deflects a micro plate in the sensor upwards closing a mechanical contact and a circuit which sends an electrical signal to the warning buzzer in the cockpit. The warning buzzer generates an alarm signal as long as the stalling situation and the corresponding flight condition is maintained.



The stall warning sensor is sensitive to excessive splash water and mechanical damages. Be careful when cleaning the wing in the vicinity of the stall warning sensor to prevent damage to the stall warning system especially due to excessive water exposure.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 30



7.14 AVIONICS

Depending on the installed optional avionic equipment, a NAV/COM Transceiver, a Transponder or a Multi-functional Display might be located in the centre section of the instrument panel. Detailed information on the operation of this equipment and descriptions of its systems are provided in the associated Airplane Flight Manual Supplements in Section 9.

The COM Transmitter is activated by a push-to-talk button which is integrated into each control stick. The microphone and headphone jacks are located in the rear section of the centre pedestal between the seats.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 31



7.15 RESERVED

[Intentionally left blank]

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.01 (12/07/2012)	13/04/2015	7 - 32



SECTION 8

HANDLING, SERVICE & MAINTENANCE

		Page
8.1	INTRODUCTION	8-2
8.2	AIRCRAFT INSPECTION PERIODS	8-2
8.3	MODIFICATIONS AND REPAIRS	8-2
8.4	GROUND HANDLING AND ROAD TRANSPORTATION OF THE AIRCRAFT	8-3
8.4.1	Towing	8-3
8.4.2	Parking	8-3
8.4.3	Tie-Down	8-4
8.4.4	Jacking	8-4
8.4.5	Road Transportation	8-4
8.5	CLEANING AND CARE	8-6
8.5.1	Painted Surfaces	8-6
8.5.2	Сапору	8-7
8.5.3	Propeller	8-7
8.5.4	Engine	8-8
8.5.5	Interior Cleaning	8-8

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 1



8.1 INTRODUCTION

Section 8 contains factory recommended procedures for correct ground handling as well as information regarding care instructions and servicing of the AQUILA AT01.

Furthermore, it also includes requirements which must be adhered to during inspection as well as maintenance and when implementing modifications and repairs.

8.2 AIRCRAFT INSPECTION PERIODS

A mandatory inspection must be conducted every 100 hours of aircraft operation. The required inspection items are listed and described in the AQUILA AT01 Maintenance Manual, the Maintenance Manual of the ROTAX® engine type 912 series and the mt-propeller Operation and Installation Manual.

After the first 25 hours of operation of a newly delivered aircraft, a one-off special inspection with the extent of a 100-hour inspection must be carried out.

After the first 25 hours of operation of a newly supplied or overhauled engine, the oneoff special inspection of the engine must also be conducted.

CAUTION

If the engine is mainly operated with AVGAS, the oil change interval is reduced to 50 hours (refer also to section 1.8 or the Operators Manual for ROTAX® Engine Type 912 Series, latest revision, for more information).

8.3 MODIFICATIONS AND REPAIRS

Prior to any modification carried out on the aircraft, the approval of the Agency or the appropriate National Aviation Authority, if outside the EU, must be obtained to ensure that the airworthiness of the aircraft is not adversely affected. EASA or national aviation regulationsmustbe observed in this regard.

Any maintenance or repair work should be accomplished in accordance with the instructions contained in the effective AQUILA AT01 Maintenance Manual or the applicable Service Bulletins and Service Information.

Prior to major repairs and in all cases of damage to the aircraft where the cause is unknown or suspect, the aircraft manufacturer or TC holder should be contacted.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 2



8.4 GROUND HANDLING AND ROAD TRANSPORTATION OF THE AIRCRAFT

8.4.1 Towing

8.4.1.1 Forward Movement

The aircraft can be safely moved and controlled by one person on a smooth and level surface using the tow bar delivered with the aircraft. Before attaching the tow bar to the nose wheel of the aircraft, make sure that the propeller blades are oriented near their horizontal position. When the aircraft is parked, the tow bar should be removed from the aircraft.

8.4.1.2 Backward Movement

The tow bar, acting as a push and control rod, should also be used to move the aircraft backwards. To hold direction, focus on a point in line with the aircraft tail and try to correct deviations while pushing the aircraft. Helpers may push the aircraft at the wing leading edge near the fuselage. The aircraft may also be pushed on the propeller blades but only in a region near the spinner. Never push or pull the aircraft in the region of the propeller tips.

8.4.1.3 Turning the Aircraft on the Ground

Use the following procedure to turn the aircraft on the ground, when the area available to maneuver the aircraft is limited. Only one person is necessary.

Press down the tail-boom of the aircraft in front of the vertical stabilizer to raise the nose wheel off the ground. With the nose wheel off the ground, the aircraft may be turned by pivoting it around an axis between the main wheels. Never press on the horizontal stabilizer to raise the nose wheel off the ground. The structural integrity of the horizontal stabilizer is not designed for load cases induced by such a handling.

CAUTION

Never pull, lift or push the aircraft at the propeller spinner.

CAUTION

Never pull, lift or push the aircraft at the control surfaces. Do not step on the control surfaces.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 3



8.4.2 Parking

For short-term parking, align the aircraft into the wind, retract the flaps, set the parking brakes, chock the main wheels and use a canopy cover.

When parking the aircraft outside for a longer period and/or in severe or unforeseeable weather conditions, tie down the aircraft. Furthermore, put on the pitot-static tube and stall warning transmitter covers, close the canopy, use a canopy cover and cap the openings in the cowling. To avoid damage to the aircraft and its control surfaces due to gusts or strong winds, lock the control stick by pulling the stick up to the control stop and securing the stick in this position with the safety belt by closing the safety belt locking mechanism and tightening the belt straps.

It is, however, recommended to always store the aircraft in a hangar



Temperatures higher than 50°C in the cockpit may damage mechanic and electronic instruments. Use a canopy cover to keep the cockpit cool.

8.4.3 Tie-Down

The aircraft has three tie-down points; two are located on the lower surface of the wings in the outboard section (fittings with M 8 thread) and the third is located on the lower fin. The tie-down points are marked by placards.

It is recommended to always carry the eye-bolts delivered with the aircraft and suitable tie-down ropes in the aircraft. For protection purposes and to retain laminar airflow conditions, seal the tie-down fittings with tape before flight.

8.4.4 Jacking

The AQUILA AT01 is provided with 3 jack-up points. Two conical jacking points are located on the lower skin surface beneath the root ribs of the wing-body joint (see also page 2-17). Both of these jacking points are marked with red ring marks and by placards. The third jacking point is the lower fin skid plate under the vertical stabilizer to support the tail of the aircraft. To jack-up the tail, a tail stand with an adapter may be placed under the lower fin skid plate and attached to the adapter at the tail tie-down point with a fastener.

The nose wheel may be lifted off the ground for maintenance or inspection purposes by attaching weights at the tie-down point in the lower fin or using its borehole to strap down the tail. If this method is used, ensure that the aircraft is properly secured against falling back on its nose wheel.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 4



8.4.5. Road Transportation

The aircraft may be transported in an open or closed truck trailer (with canvas top or in a container). If the aircraft is to be transported over greater distances, it is recommended that a standard semi-trailer container or an ISO container, measuring at least: length = 12 000 mm, width = 2300 mm, height = 2350 mm be used.

For the transportation of the aircraft in a shipping unit with these minimum dimensions, the wings and the main landing gear must be removed. When dismantling the aircraft, the appropriate procedures defined in the AQUILA AT01 Maintenance Manual have to be precisely followed.

For the safe road transportation of the aircraft, special transportation jigs are required to stow the aircraft in the transportation unit. Furthermore, additional strapping and stowing means are necessary to brace and secure the fuselage and wings during transportation, for example ratchet and suitable tie-down lashing straps, fastening and padding material.

Technical drawings of the loading equipment used by the manufacturer and a loading plan can be obtained on request.

The first step in loading the disassembled aircraft into a transportation container is to stow and secure the wing by standing it on its leading edge in an appropriate transportation jig close to the container sidewall so that the entire diagonal of the container cross-section remains available to store the airframe with the horizontal stabilizer which cannot be removed from the aircraft. Because of the limited space and the span of the horizontal stabilizer, the fuselage must be loaded and secured with a lateral inclination (bank) angle of 45 degrees or in accordance with the direction of the diagonal of the container cross-section.

The control surfaces and the flaps, if not secured in a transportation jig, should be fixed and braced using suitable tape or fixation clamps.

8.4.5.1 Loading the Wings

The unsupported main wing spar can only withstand limited bending loads in the chord line direction and limited torsional loads. For this reason, the aircraft manufacturer transports the wing bolted at the shear bolt attachment bushings to a support frame in the same configuration as it is attached to the fuselage. The support frame should also be used for vertical wing storage. Two padded stands at least 100 mm wide at the contact area are also needed to support each wing half near the kink.

If sufficient space is available, the wing may also be transported lying on pads and a pallet-like support to match or compensate wing dihedral. Loads on the control surfaces, flaps and parts protruding from the wing should be avoided at all times. To prevent damage to the surface of the aircraft, tie-down straps should always be suitably padded.

If the wing has to be loaded by crane, it must be secured in the above-mentioned support frame in the same manner as it is attached to the airframe. When appropriately secured, the wing can be lifted by the support frame or by a suitably padded hoisting

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 5



strap, looped around the main spar center section. Under no circumstances may loads be applied to the attachment fittings or brackets installed on the wing.

8.4.5.2 Loading the Fuselage

The horizontal stabilizer span of 3000 mm is almost the length of the diagonal of a standard container cross-section. Therefore, the fuselage unit, including the engine, propeller, nose landing gear and canopy must be carefully stowed and secured at an inclination angle of 45 degrees or in accordance with the direction of the diagonal of the container cross-section. The main landing gear must be removed for the transportation due to lack of space.

The fuselage has to be supported in front of the vertical stabilizer and at the wing attachment points. A suitable transportation jig should be used to prevent damage to the airframe. The mounting bolts at the wing attachment points must suitably covered to protect the fitting surfaces of the wing attachment points. The base of the airframe transportation jig must be at least 1200 mm wide and should be located in front of the forward wing attachment point to prevent horizontal tilting of the fuselage and damage to the airframe.

All loose items in the fuselage must be removed from the aircraft or properly secured to prevent damage to the structure and the systems. Additionally, the battery must be removed and all vents of the coolant expansion tank and the brake hydraulic fluid reservoir covered or plugged to avoid leaking fluids that may erode surface finishes. The propeller blades should be suitably protected and positioned for the transport.

If the fuselage is loaded by crane, suitably padded hoisting straps must be used and placed around the front section of the airframe at the firewall flange and in front of the horizontal stabilizer. The hoisting straps must be attached so that they cannot slip during hoisting and the airframe cannot tilt or shift.

8.5 Cleaning and Care



Any dirt on the surface of the aircraft deteriorates the flight performances and the flight characteristics.

8.5.1 Painted Surfaces

To maintain the flying characteristics and performances of the AQUILA AT01, the external surfaces of the aircraft must be kept clean and free of damage, especially in the leading edge areas of the wings and stabilizers.

Moreover, adequate care of the painted surfaces serves to maintain the value of the aircraft.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 6



8.5.1.1 Washing

The aircraft should be washed regularly, applying plenty of water and using a clean sponge and chamois leather.

Severe contamination and dirt, especially insect adhesion, should be washed off immediately after every flight as it is usually difficult to remove when dried.

Only in cases of extremely stubborn dirt should a mild detergent be used as it will gradually wash away the protective wax coating.

Oil and grease can be removed using a mild cleaning solvent. Commercially available aircraft cleaning agents may also be used as they are grease-soluble.

8.5.1.2 Preservation

The aircraft exterior surface is protected with a resistant and durable automotive finish. To retain its protective characteristics, minor damages to the paint should be repaired as soon as practical and the exterior surface of the aircraft waxed one to three times per year using a good **silicone-free automotive hard wax**.

CAUTION

Only silicone-free cleaning and polishing agents may be used.

8.5.2 Canopy

The AQUILA AT01 canopy offers an excellent all-round view due to its generous glazing made from special acrylic material.

Since acrylic glass can be easily scratched, the same basic principles apply as for the cleaning of painted surfaces. The canopy should be cleaned using plenty of water, a soft clean sponge and chamois leather.

Special, well-proven acrylic glass cleaners are commercially available to tackle stubborn contamination and dirt. **Never use solvents or thinner to clean the canopy glass.**

Minor scratches may be polished out using special acrylic glass polishing pastes available at specialized stores. Always follow the manufacturer's instruction to ensure the desired results.

The inside of the canopy may be treated in the same way.

8.5.3 Propeller

Refer to latest issue of the E-124 mt-propeller Operating and Installation Manual.

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 7



8.5.4 Engine

Refer to latest issue of the Operator's Manual for all versions of ROTAX® 912s engines.

8.5.5 Interior Cleaning

Dust and loose dirt in the interior of the aircraft should be removed using a vacuum cleaner. Prior to cleaning, loose or foreign objects should be removed or properly stowed.

The floor carpets may be removed for thorough cleaning.

Use a lint-free, moist cloth to clean plastic surfaces such as the instrument panel cover.

The instruments may be cleaned with a dry and soft cloth.

How the canopy is cleaned is described in subparagraph 8.5.2.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.01	A.12 (17/09/2008)	12/07/2012	8 - 8



SECTION 9

SUPPLEMENTS

		Page
9.1	INTRODUCTION	9 -1
9.2	INDEX OF SUPPLEMENTS	9 -2

9.1 INTRODUCTION

In this section, all equipment that is optionally installed in your aircraft is described in AFM-Supplements. Each individual supplement may be related to either a complete modification or a single built-in component or piece of electrical equipment. Only the AFM-Supplements that apply directly to the effective equipment configuration of your aircraft must be contained in this section following paragraph 9.2.

Paragraph 9.2 "Index of Supplements" lists all existing approved AFM supplements for the AQUILA AT01. This table may be also used as a directory for this section, appropriately adapted to your aircraft.

If your aircraft has been modified at a Maintenance Organization other than AQUILA Aviation on the basis of a STC, it is the owner's responsibility to ensure that the relevant AFM supplement is inserted in this manual and properly recorded in the index of supplements in paragraph 9.2.



For some of the devices listed below it is possible to perform a software update. These will be released on our website (<u>www.aquila-aviation.de</u>) by an appropriate SI (Service Information). The current software version on your machine, see the chapter 6.5.1 Equipment List.

Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	9 - 1



9.2 INDEX OF SUPPLEMENTS

Supplement No.	Title	Pages	Issue	Installed
AVE1	Bendix King NAV/COM KX 125	AVE1-1 to 8	A.01	
AVE2	Bendix King Transponder KT 76A	AVE2-1 to 6	A.01	
AVE3	Emergency Locator Transmitter (ELT) ACK E-01	AVE3-1 to 4	A.01	
AVE4	Garmin GMA 340 Audio System	AVE4-1 to 6	A.02	
AVE5	Garmin GNS 430 GPS Navigator	AVE5-1 to 6	A.02	
AVE6	Garmin GTX 327 Transponder	AVE6-1 to 8	A.02	
AVE7	Bendix King Transponder KT 76C	AVE7-1 to 6	A.04	
AVE8	Multifunction Display/GPS KMD 150	AVE8-1 to 6	A.04	
AVE9	Emergency Locator Transmitter Pointer Model 3000-11 (ELT)	AVE9-1 to 8	A.05	
AVE10	Winter Operation	AVE10-1 to 5	A.08	
AVE11	Emergency Locater Transmitter KANNAD 406 AF/AF-Compact	AVE11-1 to 10	A.11	
AVE12	Garmin GTX 330 Mode S Transponder	AVE12-1 to 11	A.08	
AVE13	Garmin GNS 530 GPS Navigator	AVE13-1 to 8	A.08	
AVE14	Bendix King Transponder KT 73	AVE14-1 to 8	A.09	
AVE15	ARTEX ME406 Locater Transmitter (ELT)	AVE15-1 to 8	A.10	
AVE16	NAV/COM Transceiver GARMIN SL 30	AVE16-1 to 12	A.11	

Document No.:	lssue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	9 - 2



AIRPLANE FLIGHT MANUAL AQUILA AT01

Section 9 **SUPPLEMENTS**

Supplement No.	Title	Pages	Issue	Installed
AVE17	GPS and Multifunctional Display FLYMAP L	AVE17-1 to 12	A.11	
AVE18	FLARM Collision Warning System	AVE18-1 to 10	A.11	
AVE19	Flight Data Logger KAPI Air Control FDR 07	AVE19-1 to 8	A.11	
AVE20	Mode S Transponder GARMIN GTX 328	AVE20-1 to 10	A.11	
AVE21	COM Transceiver GARMIN SL 40	AVE21-1 to 10	A.11	
AVE22	GARRECHT VT-02 Mode S Transponder	AVE22-1 to 9	A.01	
AVE23	Day-VFR and Night-VFR-Operation	AVE23-1 to 18	A.02	
AVE24	ASPEN EFD 1000 – PFD (only SNs listed in SB-AT01-021)	AVE24-1 to 8	A.02	
AVE25	ASPEN EFD 1000 – MFD	AVE25-1 to 8	A.02	
AVE26	GARMIN G500 PFD/MFD System (only SNs listed in SB-AT01-021)	AVE26-1 to 10	A.03	
AVE28	ASPEN EFD 1000 - PFD Night-VFR	AVE28-1 to 22	A.01	
AVE29	GARMIN G500 Night-VFR	AVE29-1 to 22	A.01	
AVE30	GARMIN GTN 650	AVE30-1 to 11	B.01	
AVE31	GARMIN GMA 350	AVE31-1 to 5	B.01	
AVE32	reserved		\searrow	\searrow
AVE33	reserved		\searrow	\searrow
AVE34	Trig TT-22	AVE34-1 to 11	A.01	
AVE35	Garrecht TRX 1500	AVE35-1 to 8	A.01	
AVE36	Garrecht TRX 2000	AVE36-1 to 8	A.01	
AVE Photo1	Modifications for Measuring and Photo Flight Operations	AVEPhoto-1 to 24	A.02	

Equipment marked "installed" is installed in the aircraft and the associated supplements are inserted in this manual.

	Date		Sign	
Document No.:	Issue:	Supersedes Issue:	Date:	Page:
FM-AT01-1010-100E	B.04	B.03 (04/03/2014)	13/04/2015	9 - 3